

### SKIDDING WINCH

### JL501

### OPERATION, MAINTENANCE AND SPARE PARTS MANUAL



FROM MACHINE:  
3042247  
TRANSLATION OF  
THE INSTRUCTION MANUAL  
E-EN-060318-ER  
03011030

**READ THIS OPERATION AND MAINTENANCE MANUAL  
CAREFULLY BEFORE USING THE MACHINE.**



# JL 501

---

## TABLE OF CONTENTS

INTRODUCTION	5
PRODUCT DESCRIPTION	5
REMOTE CONTROL MODELS ALLOWED TO BE USED WITH FARMI WINCHES	5
PRODUCT WARRANTY	6
GENERAL SAFETY INSTRUCTIONS	7
SAFETY INSTRUCTIONS FOR WINCHES	10
STICKERS AND PLATES	11
MAIN PARTS AND ACCESSORIES	14
TECHNICAL SPECIFICATION	15
MOUNTING	16
PRE-OPERATION CHECKS	17
CONTROLS	19
OPERATION	19
PRE-OPERATION CHECKS	20
WINCHING	21
SKIDDING	21
WORKING IN ROUGH TERRAIN	22
IF YOU GET STUCK WITH THE TRACTOR	22
DROPPING THE LOAD	22
TRANSPORTATION	22
MAINTENANCE	23
LUBRICATION	23
CLUTCH ADJUSTMENT	23
ADJUSTING THE ROLLER CHAIN TIGHTNESS	24
ADJUSTING THE DRUM BRAKE	24
REMOVING THE WINCH MECHANISM	24
ASSEMBLY OF THE MECHANISM	25
TROUBLE SHOOTING	26
03032182 FRAME	28
03010501 MACHINERY	30
LOWER PROTECTIVE SCREEN	34
43511780 COVER OF THE UNIVERSAL SHAFT	34
33185100 PROTECTIVE SCREEN	35
PRODUCT REGISTRATION FORM	40

When ordering spare parts, please indicate the machine's type from the machine plate, spare part's order number, description and quantity required.

Example. JL 501, 94624046, torsion spring, 2 pc



## EC DECLARATION OF CONFORMITY

Original declaration of conformity

**Manufacturer:**

Farmi Forest Corporation  
Ahmolantie 6, FIN-74510 IISALMI, Finland

**Person authorized to compile the technical documentation:**

Name: Matti Berg  
Address: Ahmolantie 6, FIN-74510 IISALMI, Finland

**Commercial name:**

Farmi

---

**Machine denomination:**

Skidding winch

---

**Machine type:**

JL501

---

**Machine series number:**

---

Herewith, we declare that the machine brought into circulation conforms with the pertinent requirements of the Machinery Directive 2006/42/EC.

The following harmonized standards were used for the conceptual design of the machine:

EN ISO 12100, SFS EN ISO 13857, SFS EN ISO 4254-1

---

Iisalmi

(Place)

6.3.2018

(date)

Sami Jerkku

## INTRODUCTION

This manual includes the information and maintenance instructions required for operating the machine in the optimal manner.

Although you have experience in using this kind of machinery, read the operation and maintenance instructions carefully since they include information enabling efficient and safe operation. Regular maintenance is the best way to guarantee the efficient and economical performance of the machine.



**Each and every operator must read, understand, and follow all safety instructions and procedures.**

## PRODUCT DESCRIPTION

A winch is a machine intended for harvesting felled timber from the forest. The basic components are welded frame, driveline, drum with wire rope, directional pulleys, friction clutch and a brake.

In FARMI winches, there are two different kinds of brakes: models EV300, EV35R and JL501 are operated with ratchet brake and models EV35, JL51, JL61 and JL86 with automatically switched on band brake.

There are also two different type of control systems in FARMI winches: 1) Manual control where two ropes are used by operator to control the unit or 2) electro hydraulic control where operator uses remote control instead of ropes. In this case, functions are operated with hydraulic cylinders.

Using the wire rope, the logs can be towed to the winch and anchored with chains to the winches slotted dozer plate. After this logs can be transported to a place where other means of transport are accessible. FARMI winches may not be used for lifting! Factory setting values may not be changed without a permission of Farmi Forest.

## REMOTE CONTROL MODELS ALLOWED TO BE USED WITH FARMI WINCHES

FARMI winches can be equipped with radio remote controls.

- ELCA radio controls:
  - Model MITO-ALPI
  - Model MITO-VETTA, Farmi Forest specification
- B&B (Made by Telenot): Model F10

Any other remote controls has to meet the requirements of category 1 and performance level c (CAT1 and PL c, SIL 1) according to standard SFS-EN ISO 13849-1 and may only be mounted with an approval of Farmi Forest Corporation.

## PRODUCT WARRANTY

Farmi provides a 12-months warranty on all Farmi products.

Register on our home page ([www.farmiforest.fi](http://www.farmiforest.fi)) under FeedBack ("Product Registration" form) within 30 days after the receipt of the product to get full product warranty and additional information on your product. If it is not possible for you to register via internet, please register as follows: Complete the registration form on the last pages of this manual and return it to us within 30 days after the receipt of the product.

## CUSTOMER FEEDBACK

We are happy to receive your opinions and suggestions for improvements by mail, fax or e-mail. All implemented suggestions for improvements will be rewarded.

## WARNING SYMBOLS IN THIS MANUAL



- **imminent danger which could cause serious personal injury or death**



- **danger which could cause personal injury**



- **conditions or misuse that could damage equipment or machinery**

## GENERAL SAFETY INSTRUCTIONS

These safety instructions are meant for the owners of FARMI equipment, as well as those who operate, service or repair it.

The instructions help with:

- using the machine safely, appropriately and effectively.
- identifying, avoiding and preventing potentially dangerous situations.

The manufacturer supplies an instruction manual, which must always be available at the place of operation of the machine. Each user must read the safety, maintenance and operating instructions before operating the machine, and comply with these instructions at all times.



**Ensure that every operator of the machine is familiar with the content of the instruction manual and situation-specific safety instructions, and has been suitably trained before operating the machine.**

The machine complies with technical requirements and applicable safety regulations. However, incorrect use, maintenance or repair of the machine may cause risks.

In addition to the instruction manual, remember to comply with regulations of the local occupational health and safety authorities, and with your country's laws and decrees.

**The manufacturer is not liable for damages caused by:**

- incorrect, negligent or inappropriate use of the product.
- non-original spare parts.
- normal wear and tear.
- misuse caused by an untrained person's improper actions.
- alterations made without the manufacturer's permission.



**Written authorization must be requested from the manufacturer for any alterations to the machine.**

## STARTING

- Familiarize yourself thoroughly with the use, operation and controls of the machine and its equipment before starting.
- Familiarize yourself with the capacities and limitations of the machine and its equipment.
- Do not use the machine unless you are completely familiar with its operation.
- Be aware of the machine's danger zones.
- During operation, prevent bystanders from entering the danger zone.
- Ensure that each operator has the necessary safety equipment, such as a helmet, safety goggles, work safety boots and suitable protective clothing.
- Never wear loose clothing around moving parts. Protect long hair!
- Ensure that work is carried out according to the stipulations of applicable occupational health and safety legislation.
- Before starting up or using the machine, ensure that it cannot cause a risk to other people or property.
- Perform a safety check on the machine before every use. If you observe any faults or deficiencies, repair the machine immediately.
- Before operating the machine, ensure that there are no foreign articles in it.
- Place the machine on a hard, level surface for operation. In the winter avoid working in slippery areas.
- Before mounting and using the machine, check the PTO drive shaft for correct condition and attachment.
- Never use a faulty or deficient machine.

## TRANSPORT

- Before driving with the machine, ensure the safe mounting of the machine. Make sure that the journals are seating correctly and that the pins are tight. Check the tension of the lower link stabilizers.
- Before driving with the machine, make sure that the required lamps and reflectors as well as the slow moving vehicle sign are attached correctly. Moreover, the lamps should be checked for correct functioning.
- Before driving with the attached machine, make sure that the hydraulic unit of the machine is depressurized (unless otherwise instructed in the operating instructions).
- When driving on public roads, always observe the valid traffic regulations. The travel speed must be adapted to the specific conditions.
- When driving, please take into consideration the additional mass resulting from the machine's weight. It may affect the reactions, the steerability and the braking function of the tractor.
- Please note that the machine rear sways when turning.
- Pay attention to the machine's height near bridges or other height restricting objects.
- When backing off, the machine may obstruct the rear view. Exercise extreme caution. If necessary, ask a flagman to help you; he can indicate the required distances.
- It is prohibited for other people to ride on the machine.

- Never insert any body part into the machine with the engine running.
- If any faults arise that may jeopardize occupational safety, turn off the machine.
- During operation, the machine's operator is responsible for safety in the whole work area. Work may not be carried out in the presence of any factors that jeopardize occupational safety.
- Exercise extreme caution when hitching / unhitching the machine from a tractor/trailer.



**The machine's operator must have constant, unobstructed visibility of the work area. If this is not possible, the operator must work with an assistant.**

- Look out for moving parts when the machine is in operation.
- Secure the machine against unauthorized and accidental operation (e.g. moving when parked) whenever it is left unattended.
- Never leave the machine running unattended.
- Avoid causing fast, stroke-like loading.
- Never exceed the given operating values.
- All safety and warning signs on and in the machine must be legible and intact.
- The machine may not be operated by persons who are unwell or under the influence of drugs or alcohol.

## OPERATION



**Many occupational accidents take place in abnormal circumstances. Therefore it is important to take into account all the possible circumstances that may arise during operation of the machine.**

- Depending on the machine's type, it will have diverse safety devices and protectors. These are meant to protect the machine and its operator, and they must never be removed or altered. Never start up or use the machine without all the safety devices and protectors in place. Also check the universal joint's safety equipment and joints.
- The machine may only be serviced and repaired by professionals.
- Electrical and hydraulic faults may only be repaired by authorized professionals.
- In cases requiring welding, contact the manufacturer.
- Turn off the tractor engine and disconnect the universal joint before beginning service or maintenance actions.
- Before any maintenance work, turn the main power switch of the tractor to OFF.
- Ensure that there is no pressure in the hydraulic system.
- Take out the key from the tractor's ignition for the duration of the servicing or maintenance. Check that the power is off from the machine you are working on.



- When servicing the machine, place it on a level surface and ensure that it cannot be moved.
- Observe the service intervals and annual safety inspections.
- All spare parts and equipment must fulfill the manufacturer's requirements. This can be guaranteed by using original parts.
- Put all safety devices back into place immediately once servicing or maintenance is complete.



**When lifting the machine, check that the lifting/hoisting equipment is in perfect working order. Check the weight of the machine before lifting it. Choose lifting trajectories so that they do not cause any danger.**

Many countries have specific legislation on lifting, hoisting cables and hoists. Always comply with local safety regulations.

## OILS AND LUBRICATION

- Always use the oil types recommended by the manufacturer. Other types of oil may cause faults or improper operation of the equipment, which could lead to serious damage to people or property.
- Never mix different liquids or oils.
- Always follow the manufacturer's lubrication instructions.
- Use control equipment carefully until the hydraulic oil has had time to reach its operating temperature.

## SAFETY INSTRUCTIONS FOR HYDRAULIC CIRCUITS

1. Work on hydraulic equipment may only be carried out by professional hydraulic engineers.
2. Be cautious when using the equipment in cold conditions.
3. Check the machine for leaks. Do not use the machine if there is a leak from any system. Check all hydraulic hoses – particularly those which are bent during use – and replace any that are in poor condition or have leaks. Ensure that all joints are tight and that the lines are not damaged. Check that all protective caps and filler caps are closed properly. Check the hose sheathing for damage.
4. Check that all hose connectors, lengths and qualities comply with applicable requirements.

When replacing or repairing hoses, use original parts or hoses and connectors recommended by the manufacturer. Check particularly that the pressure classes of the hoses and connectors are suitable to the operating pressure levels.

5. Check that all safety devices such as pressure relief valves, etc., are in place and work properly. Familiarize yourself with their use. Safety systems may never be bypassed.
6. Check the main hydraulic parts daily, and always after a fault. Replace any damaged parts immediately.
7. If a component is damaged, clean it before repairing it. Do not use solvents when cleaning parts.
8. Do not attempt to carry out repairs that you are not fully familiar with.
9. Never carry out repairs of the hydraulic circuit when the system is pressurized. When pressurized, the oil spray can penetrate the skin and cause mortal danger.
10. Never work below a device or component that is only being held up by hydraulics. Use separate supports when carrying out maintenance or repairs. Do not disconnect cylinders or their valves until the machine is well supported.
11. Most hydraulic oils do not evaporate easily. Risk factors include hot oil, spills and oil mist (pressurized).
12. If oil gets into your eyes, rinse with plenty of water and contact a doctor.
13. Avoid prolonged or repeated contact with your skin.
14. If sprays or contact with the skin cannot be avoided, use protective gloves, goggles and clothing as necessary. Do not use oily clothing.
15. Avoid discharging hydraulic oil into the environment, as it can pollute waterways and the groundwater. If biodegradable oil is to be used, please contact the manufacturer beforehand and have the suitability of your equipment for the operation with biodegradable oil confirmed by him before such oil is used.
16. Store the oil in sealed containers provided by the manufacturer. Try to transfer the oil directly from its container into the tank.
17. If the oil must be passed through other containers, ensure that they are completely clean. Caps, funnels, sieves and filling holes must also be clean.
18. Never store oil outdoors, as water could condense in it.
19. Always dispose of oil in a suitable container, never into the environment!

## SAFETY INSTRUCTIONS FOR WINCHES

- Check that the wire cable is in good condition before using the winch (check for corrosion, sharp bends, breakage and thickness of strands). If a cable snaps, it can whip towards the operator or away from the winch.
- Operate the winch with a guide cable at least 2 meters away to the side of the machine. Do not operate the winch from the tractor cabin unless a safety net has been installed.
- When winching downhill, the pulling must be done from the side using an additional idler.
- When winching on a hill, do not follow the load from below.
- Side-winching must not be done at angles of more than 30 degrees.
- It is extremely dangerous to be in the space between a load attached to the wire cable and the winch.
- Check that all bystanders are at a safe distance of at least 15 meters whenever the machine is running. Place warning signs on approaching roads.
- Never touch the wire cable by hand during winching.
- The maximum load must be adjusted to conditions.
- Check that the winching chains are carefully attached. Do not attach the wire cable directly to the load.
- The safety coefficient must be 2.5 for cable-type fasteners and 2 for chain-type fasteners.
- Disconnect the transmission before examining the machine in the case of any faults.
- Ensure the wire cable is as short as possible during transport.
- The winch may only be used for winching and hauling. Do not use the winch for lifting loads.





The noise level from the engine should not exceed 70 dB. Check the engine noise and wear ear protection if it exceeds 70 dB.


# JL 501

## STICKERS AND PLATES

The following plates and labels must be correctly attached to the machine.  
Missing safety plates / labels must be replaced immediately.

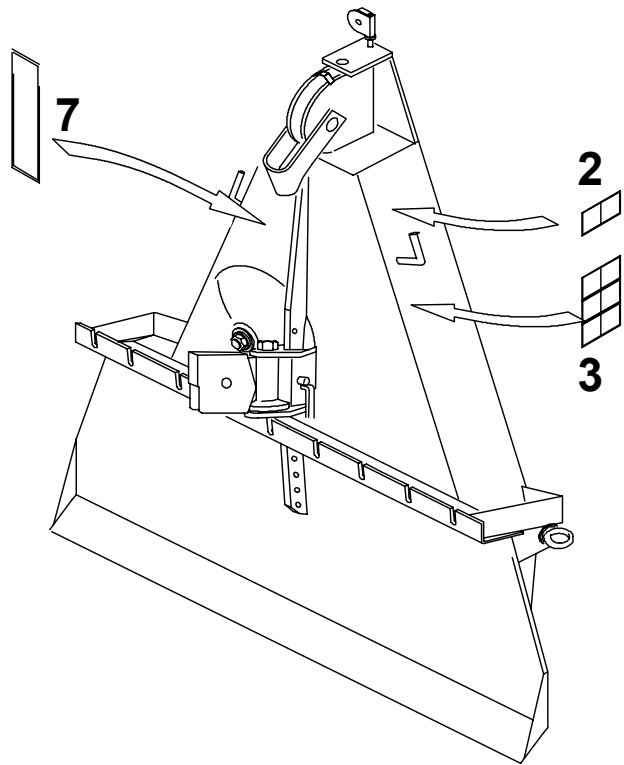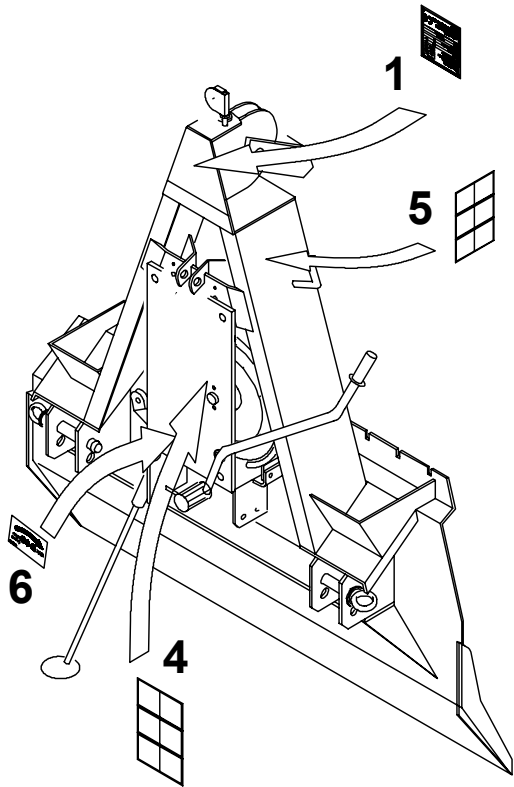


<b>Farmi Forest Corporation</b>			
Ahmolantie 6 FIN-74510 IISALMI FINLAND			
			<b>CE</b>
TYPE	FARM WINCH		
MODEL	JL 501		
DIN 15020 GROUP	EM	1	4-1011960
MAX. ALLOWED PULL EMPTY	kN	50	
MAX. ALLOWED PULL FULL DRUM	kN	19	
SERIAL NO.			
YEAR OF MANUFACTURE		20	
POWER NEEDED	kW	25	
MIN. DIAMETER OF CABLE	mm	10	
MIN. BREAKING LOAD OF ROPE	kN/mm <sup>2</sup>	1,96	
WEIGHT	kg	250	

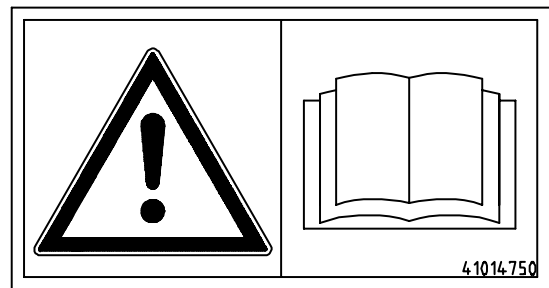

2. Note! See manual for operation and maintenance. (41014750)

1. Machine plate JL501 (41011960)

# JL 501

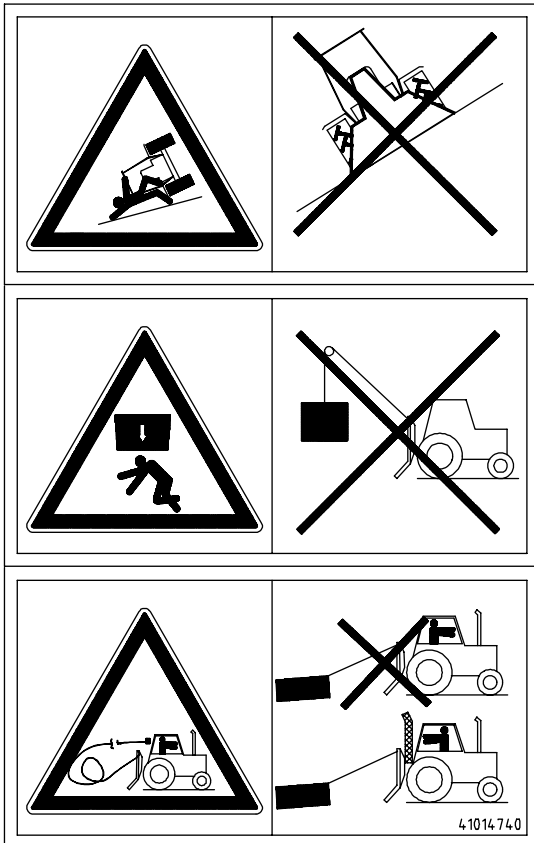


3. Nr 41014740

*Falling danger!  
Do not work in an oblique position.*

*Crushing danger!  
Do not use the winch for the lifting.*

*Watch out for a breaking cable!  
Always use the protective screen.*

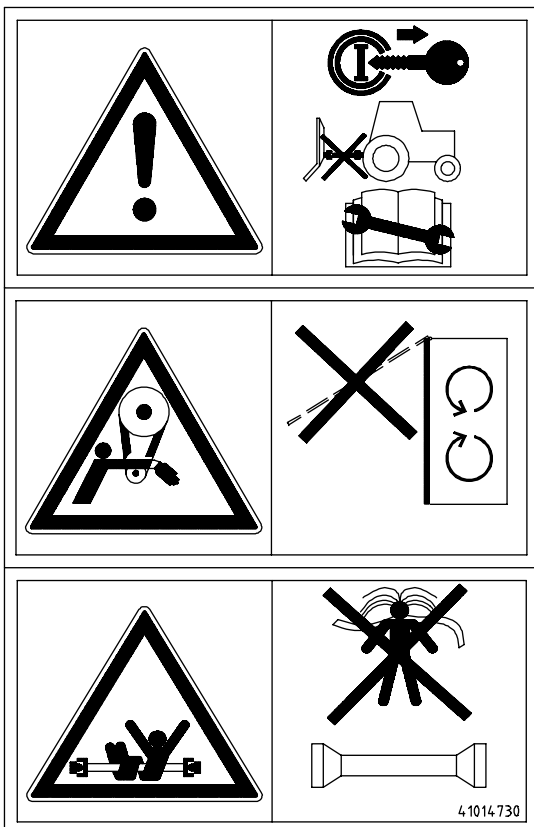


4. Nr 41014730

*Note!  
Before doing maintenance work turn off the motor,  
remove the ignition key and disengage the P.T.O.*

*Accident danger!  
Keep the safety equipment where it belongs.*

*Winding danger!  
Do not wear too loose clothes and keep the hair bound  
inside the cap.*

# JL 501

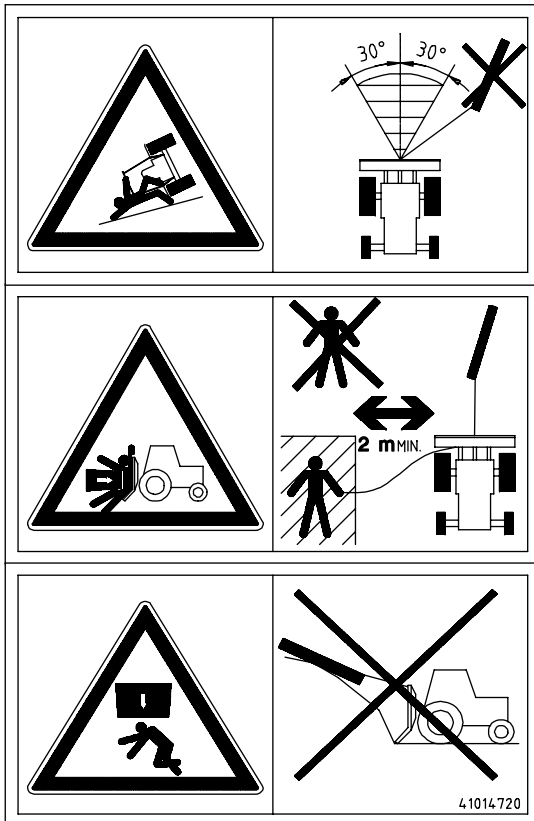


5. Nr 41014720

*Falling danger!*  
Do not winch at sideways angles exceeding 30 degrees.

*Crushing danger!*  
Do not stand in front of the winch when working. Stand on the side at a distance of at least 6 ft from the winch.

*Crushing danger!*  
Do not winch downhill.

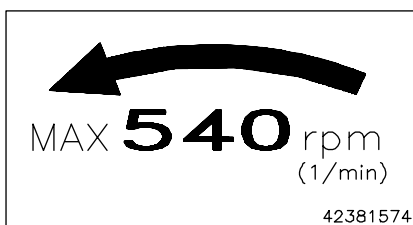

6. Maximum rpm (42381474)




7. FARMI-sticker (40147110)



8. Sticker 501 (40147280)

# JL 501

## MAIN PARTS AND ACCESSORIES

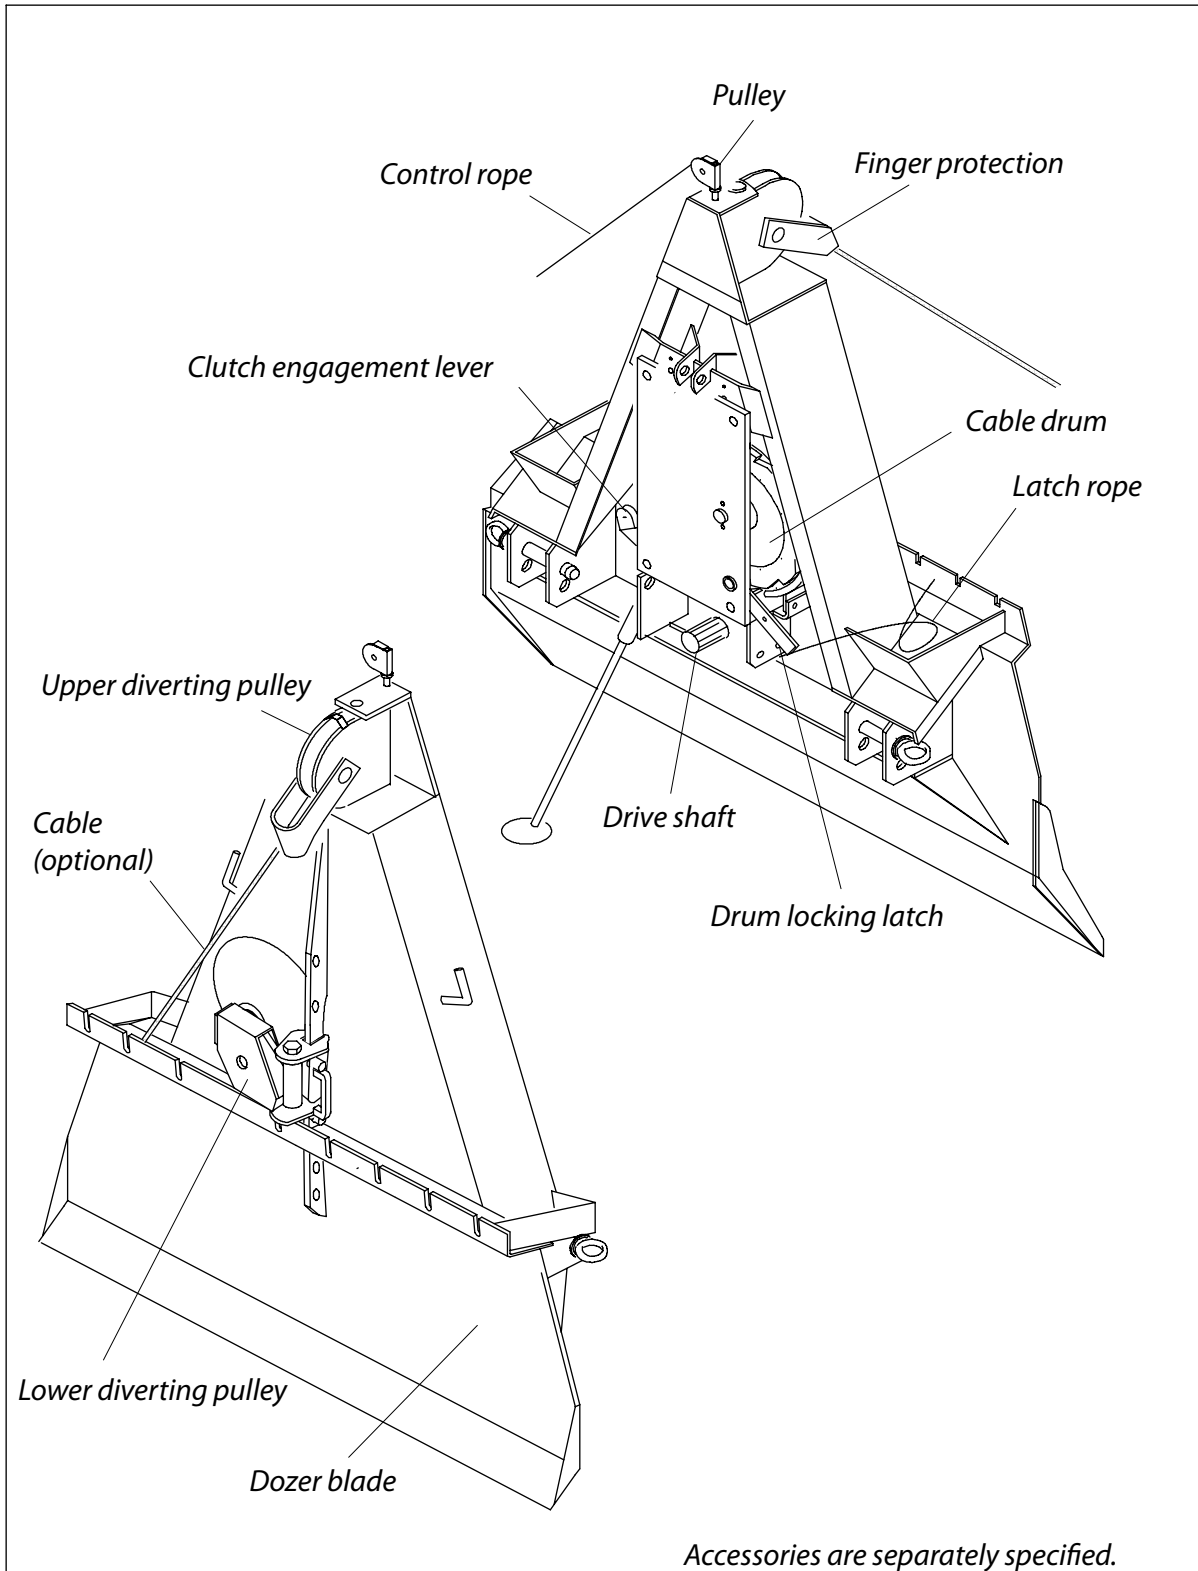


# JL 501

## TECHNICAL SPECIFICATION

		<b>JL 501</b>
<b>Tractive power</b>	Cable drum empty ( Maximum)	50 kN
	Cable drum full (Minimum)	19 kN
<b>Cable capacity</b>		55 m of $\varnothing$ 11 mm (180 ft of 7/16") cable
<b>Ultimate strength of the cable</b>	1,96 kN/mm <sup>2</sup>	compacted
<b>Winching speed</b>	350 rpm	0,3 - 0,9 m/s (1-3 ft/s)
	540 rpm	0,5 - 1,4 m/s (1.6-4.6 ft/s)
<b>Weight( without cable)</b>		250 kg (552lbs)
<b>Clutch</b>		Mechanical friction plate clutch with heat sink
<b>Power transmission</b>		Universal shaft from tractor
<b>Mounting</b>		To 3-point hitch(Kat.I and Kat.II)
<b>Power needed</b>		min. 25 kW (34 hp)

## DIMENSIONS

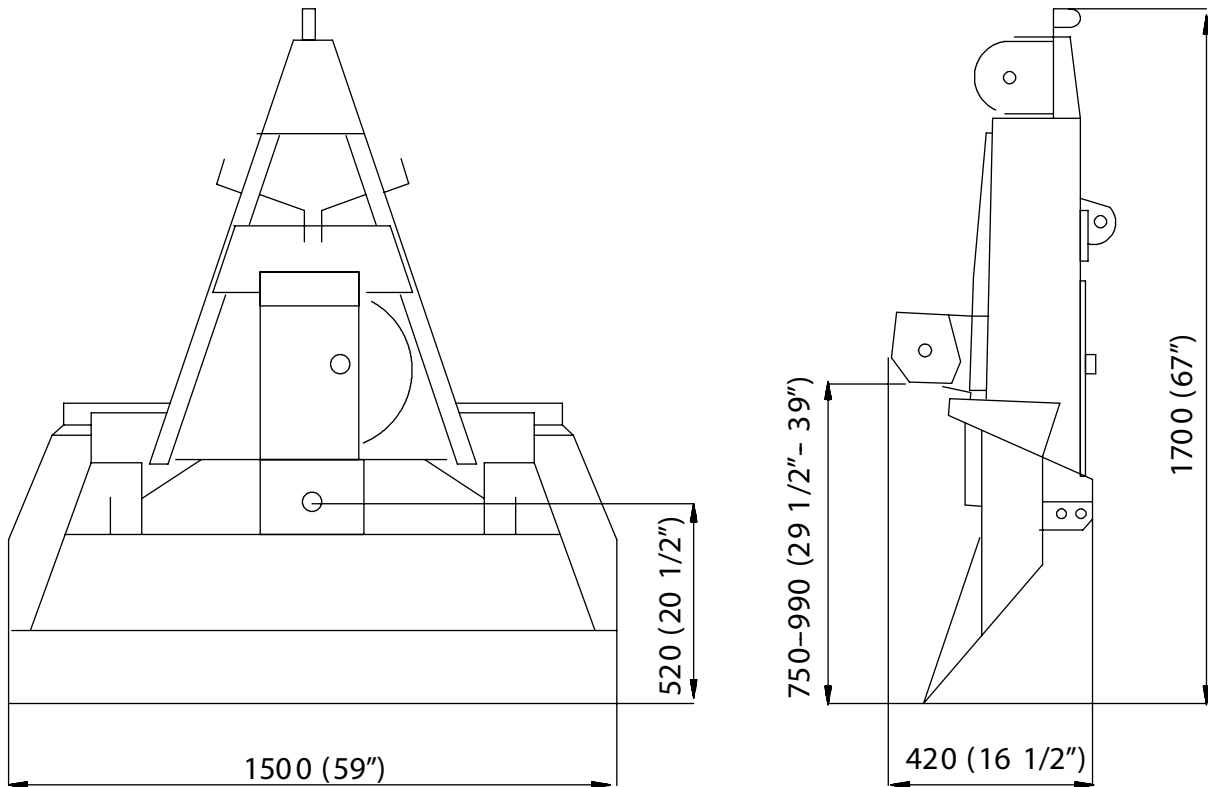

## MOUNTING

### MOUNTING TO THE 3-POINT HITCH

The winch can be mounted to the 3-point linkage of any tractor. Power transmission is obtained through universal shaft from tractor.

### ASSEMBLY OF THE PTO SHAFT



If the PTO shaft is too long it may get pressed when the three point hitch is lifted up. This may cause damage to the bearings of the winch or to the PTO of the tractor. The PTO shaft must not be

too short in any position.

The PTO length is suitable, if the pipes do not reach the bottom.

PTO is optional equipment.

1. Mount the winch to the 3-point hitch of the tractor.
2. Raise the winch high enough to get the PTO shaft of the tractor and the winch to a horizontal level.
3. If you have a shortened PTO shaft available, put one end into the drive shaft and check that the distance of the locking of the other end. Take into account the additional clearance of approx. 20 mm (0.78").
4. Fasten the other end of the PTO shaft in its place and also move the winch sideways at the same time securing that the axis does not base.

### SHORTEN THE DRIVE SHAFT



Both PTO halves must be shortened by equal amounts.

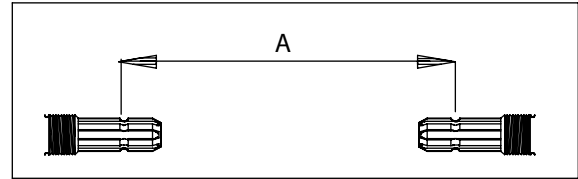


Fig. 1. Measure A when the drive shafts are nearest to each other.

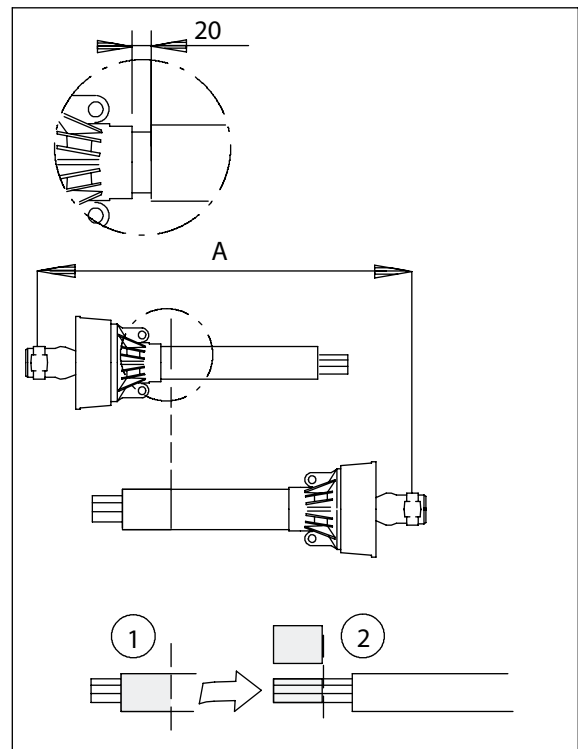


Fig. 2. Shorten the drive shaft

- First cut the thicker cover to a correct length (1). Remember 20 mm (0.78") clearance. Then cut away the same amount from the form pipe. Make a similar shortening to the second half of the PTO shaft. Remove the burr with the file.
- Connect the PTO shafts within each other. Make sure by moving elevator carefully up and down that the shortening of the axis is sufficient. Check that the axis have 20 mm (0.78") latitude.



## FASTENING THE CABLE TO THE DRUM

1. Tape the cable end to prevent loosening of the core wires.
2. Pass the cable through the hole in cable guard, over the upper snatch block and then inside the winch.
3. Insert the cable from behind the roll of the drum brake.
4. Pull the cable onto the drum from the left hand side (the same side as the clutch lever).
5. Pass the cable end through the hole in the drum plate, pull about 15 cm (6"), and insert under the wedge of the cable lock device. See fig. 3.
6. Tighten the cable lock screw.
7. Winch the cable on the drum. **REMEMBER THAT THE CABLE HAS TO BE LOADED HEAVILY, WHEN WINCHING THE CABLE BACK ON THE DRUM.**

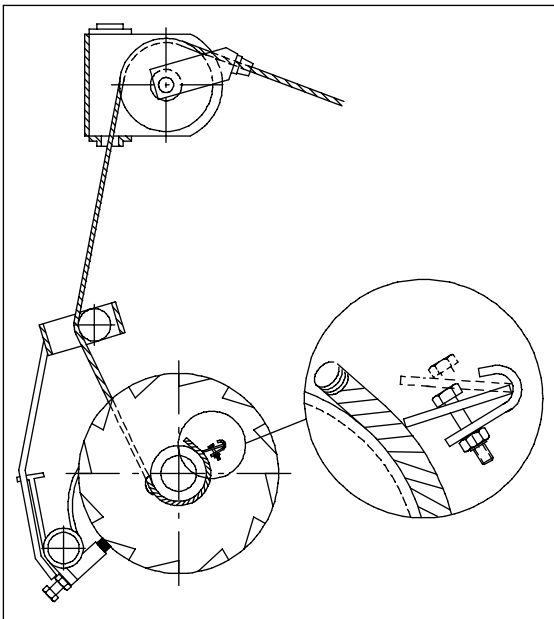


Fig. 3. Fastening the cable

Do not use longer cable than needed. With correct length you achieve good pulling strength and proper winding of the cable.

## PRE-OPERATION CHECKS

### CABLE

Check that:

- the cable is faultless (breakage risk).
- there are no twists or kinks (breakage risk) in the cable.
- the cable has been properly fastened to the winch.

### WINCH

Check that:

- all the pins and lynch pins are in place.
- all bolts and nuts have been tightened.
- roller chain is tight.
- the drum brake has been properly adjusted.
- the clutch has been correctly adjusted.
- lubrication is carried out correctly. See lubricating instructions.



**When installing the safety guard, make sure the clutch does not get caught on the safety guard.**

## MOUNTING THE SKIDDING WINCH TO THE TRACTOR



**NOTE! Never go between the tractor and the skidding winch! DANGER OF CRUSHING! Make sure there is nobody between the tractor and the skidding winch when you back up the tractor.**

1. Fasten the tractor drawbars to the skidding winch.
2. Fasten the push bar to the skidding winch.
3. Engage the articulated shaft.
4. Connect the electric power if the skidding winch is equipped with electro-hydraulic control.
5. Lift up the winch outriggers.
6. Make sure that
  - the push bar mounting on the tractor is locked (with a support block, if needed).
  - the lock pins are closed.
  - the side limiters are locked.
  - the articulated shaft is of correct length, firmly in place and the shield chains are closed.
  - the skidding winch outriggers are lifted up.

## DISCONNECTING THE SKIDDING WINCH FROM THE TRACTOR

1. Lower down the skidding winch outriggers and lock them with the lock pins.
2. Lower down the skidding winch on hard, even surface.
3. Make sure that the skidding winch cannot fall over.
4. Disconnect the electric power, if the skidding winch is equipped with electro-hydraulic control.
5. Make sure that all the components of the skidding winch and the tractor have stopped moving.
6. Disengage the articulated shaft.
7. Disconnect the push bar from the skidding winch.
8. Disconnect the drawbars from the skidding winch.

## STORAGE

1. Store the skidding winch on hard, even and dry surface.
2. Store the skidding winch in an area not frequented by people.
3. Never allow children to play near the skidding winch.
4. Make sure that the skidding winch cannot fall over during storage.

## CONTROLS



Get acquainted with the controllers of the winch before the use, tests the stopping functions of the winch and the tractor and all other functions. Each function has to be in perfect condition.

## OPERATION

### SAFETY PRECAUTIONS



Read the operation instructions before operating this machine! It is the owner's responsibility to instruct all equipment operators and support personnel in the operation of this winch.

### PULLING OUT THE CABLE

- The cable can be freely drawn out if the drum has not been locked with a latch.

### WINCHING

- The winch is equipped with a clutch, which will be used by the control rope. When the user draws the control rope, the winch begins to draw in the cable. Winching will stop when the rope is released.
- The end of the cable drum is equipped with a friction clutch, which slips, if the load is too heavy. This prevents cable break or damages if the load gets caught.

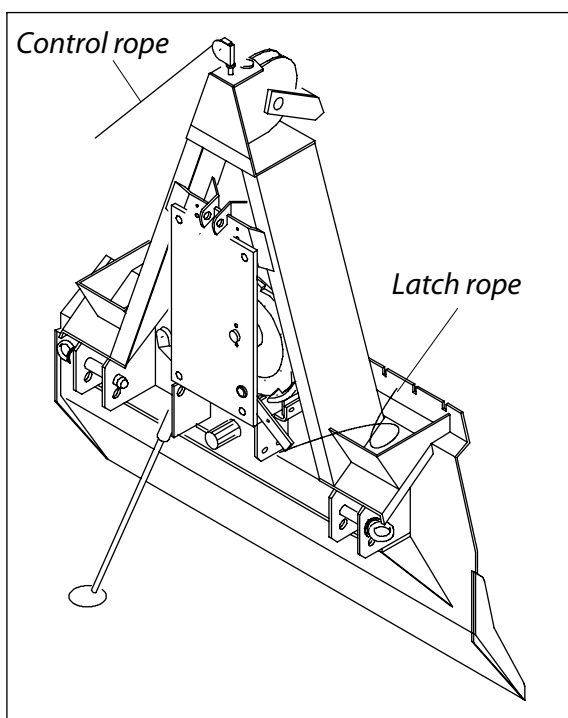


Fig. 4. Controls

1. Choose a horizontal, hard based skidding route for the tractor. Avoid steep slopes, especially when winching from the side. Check that the winching trail is clear and that the tractor's parking brake is on. Do not run the tractor at a high idle when winching. Maximum P.T.O speed is 540 rpm. Ensure that the logs can be drawn freely. Be especially careful when working on slopes. Avoid winching sideways at angles exceeding 30 degrees. Use snatchblock which is fastened to the tree if needed. (See fig. 7.)
2. The safest place for the operator is at the back left side of the winch, allowing good visibility. See fig. 21. Take care that there is no one in the working area.
3. The tractor must have a ROPS cab and front end weights.
  - Always position the tractor on a flat ground in line with the direction of the pull (see fig. 5.). Avoid working in steep terrain. Ensure nothing is blocking the path of trees.
  - Avoid an unnecessarily strong pulls, the tractor may roll over.
  - Adjust the tractors rpm's according to the conditions.
  - Use a shield between the seat and the winch (e.g. safety cab or protective screen) if you run the winch from the tractor seat.
  - Use agreed signals when working in groups.
4. When you use a light tractor, there is a very big risk that the tractor will roll over. To avoid that risk, you must add extra weight to the front of the tractor.

- The falling danger of the tractor can be reduced by winching through the lower snatchblock.

## PRE-OPERATION CHECKS

### MOUNTING AND USE OF THE LOWER DIVERTING PULLEY

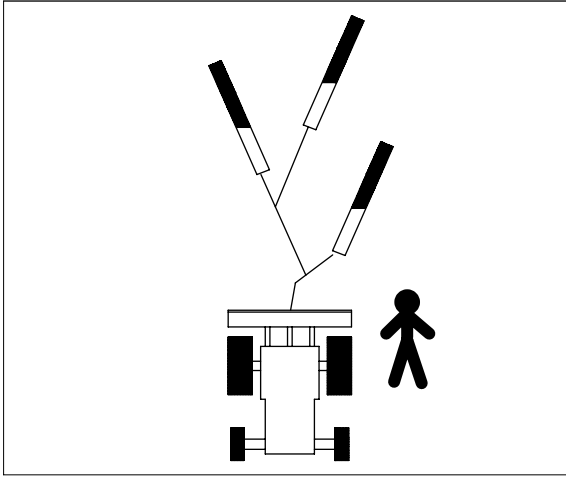


Fig. 5.

- Usually the logs are winched in through the upper pulley of the winch. This lifts the logs and they dig less into the ground. The weight of the load also pushes the blade into the ground thus anchoring the winch and the tractor to the ground.
- The winch has a lower diverting pulley. The main use of the lower diverting pulley is to lower the pulling point. This enables larger loads to be skidded out. For skidding out the load the cable is transferred to the lower diverting pulley.
- Several logs can be hooked up and winched in at one time by means of keyhole sliders on the cable. The skidding chain should have a pin on the end, which makes it easier to pass the chain underneath the tree. See fig. 8.

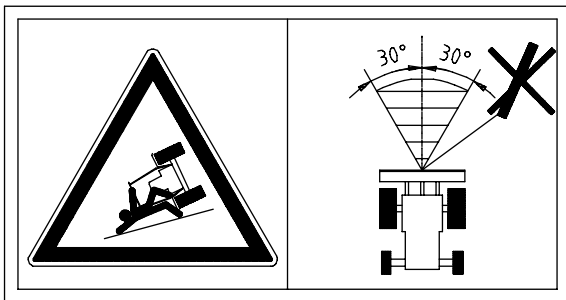


Fig. 6. Do not winch sideways at angles exceeding 30 degrees. The tractor can tilt.



When using the lower diverting pulley make sure that it follows the direction of the cable. Otherwise the cable will be damaged, when it is pressed between the diverting pulley and the lower diverting pulley frame.



When winching an unloaded cable, make sure that the finger guard doesn't rise up with cable and doesn't cause cable to crosscut.

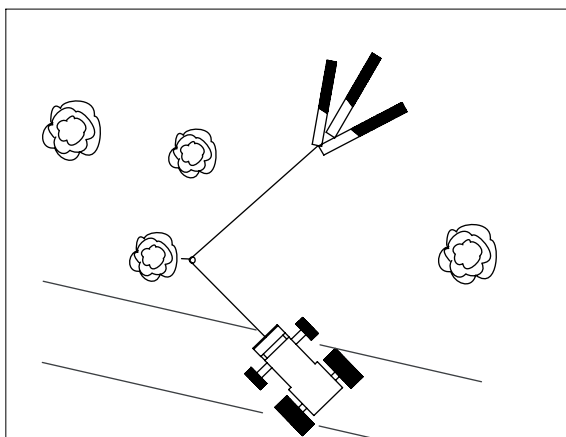


Fig. 7. Use a diverting pulley to avoid winching sideways.

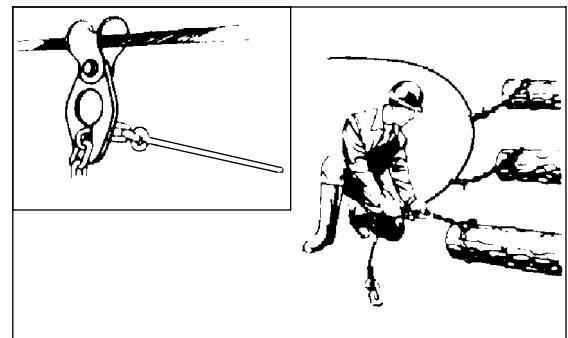


Fig. 8. Use a keyhole sliders to winch several logs at one time.

## WINCHING



Before using the winch, you have to pull the cable completely out of the drum and winch the cable back on the drum with a heavy load. Otherwise the cable will be damaged.

- Park the winch and tractor on level, stable ground. Lock the brakes of the tractor before winching. Lower the 3-point hitch so that the dozer blade anchors the winch to the ground. See fig. 9.



Do not let the dozer blade sink too deeply into the ground, so that the PTO shaft is not damaged.

- Before using the skidding winch, make sure that the lower diverting pulley, the upper diverting pulley and the finger guard move freely.

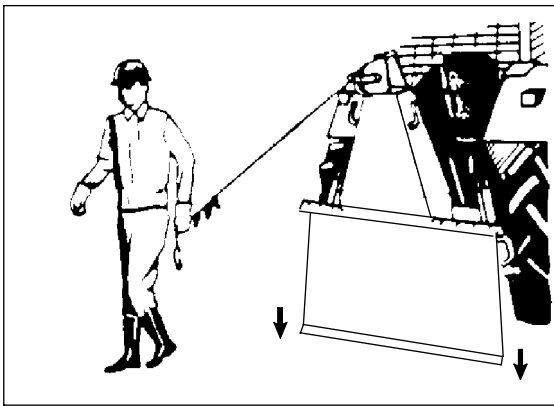


Fig. 9. Anchor the dozer blade to the ground.

1. Draw the cable to the load but avoid twitches. Do not draw out too much cable to avoid loose spaces when the cable is reeled in.
2. Start the tractor, turn the PTO on. Use the winch with the control rope and stand in a safe place at a distance of at least 2 m (6 ft) from the winch. Use the upper snatchblock when winching.
3. Operate the clutch firmly. Avoid sliding the clutch to avoid warming of the clutch. Stop winching by letting go of the control rope for the leave. The clutch will slip when the load is heavier than the selected pull. This prevents damages to the cable

or winch. Avoid extra large loads. The winding speed depends on the number of revolutions of the tractor. Do not wind too fast.

4. Stop winching when the logs are at about 1,5-3 m (5-10 ft) from the tractor. Install the cable on the lower diverting pulley.

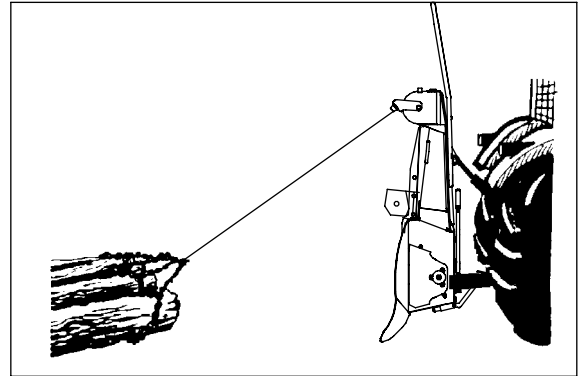


Fig. 10. Winching over the upper diverting pulley

## SKIDDING

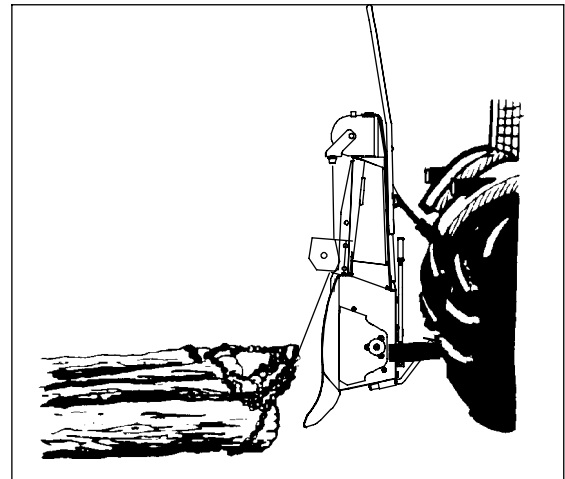


Fig. 11. Cable on the lower diverting pulley

1. Turn the P.T.O on. Pull the clutch control rope and winch the logs to the pulley. Keep the tension on the cable and pull the thinner rope that operates the brake ratchet. Stop pulling on the clutch rope first. The load is now locked in place. Alternatively the skidding chains can be attached to the notched beam.
2. Turn off the P.T.O.
3. Raise the 3-point hitch so that the logs come off ground (fig. 12.).
4. Move the logs to the desired place.

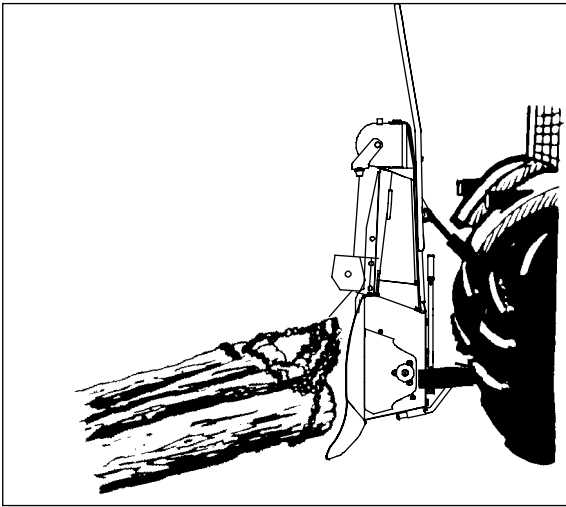


Fig. 12. Winching over the lower diverting pulley

## WORKING IN ROUGH TERRAIN

Drop the load before you reach bad terrain. Drive through the bad spot. Winch in the load again (Fig. 13.).

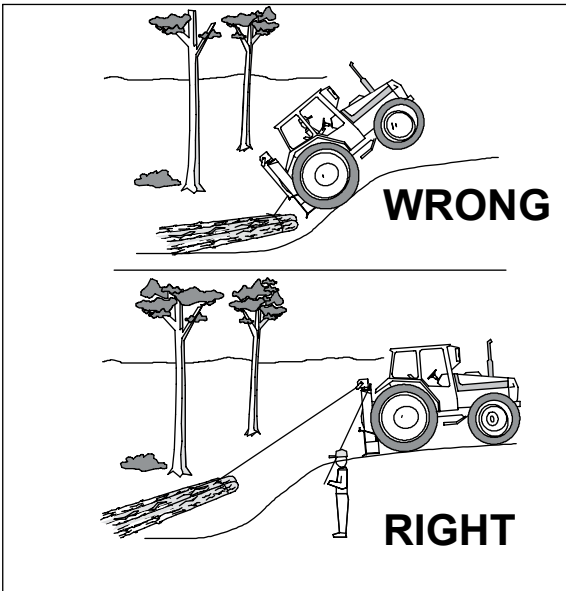


Fig. 13. Driving through bad terrain

## IF YOU GET STUCK WITH THE TRACTOR

1. Drop the load. Drive the tractor to firm ground. Winch in the load.
2. If you cannot move the tractor, release the load and winch the tractor out. When winching the tractor out, always run the cable under the lower pulley.

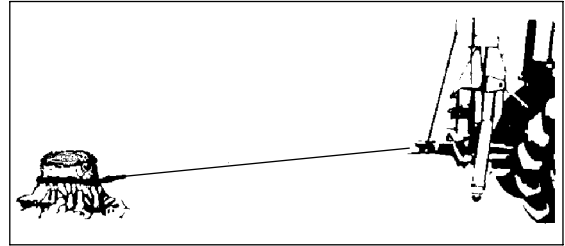


Fig. 14. Winching the tractor out

## DROPPING THE LOAD

1. Let down the 3-point hitch.
2. Pull the clutch rope until the brake ratchet releases, then stop pulling the clutch rope. The logs drop to the ground.

## TRANSPORTATION

The cable should be run under lower diverting pulley and locked in place for transportation of the winch.

## MAINTENANCE

### SAFETY



Disengage the P.T.O and turn the tractor off before you service the winch, remove the keys so the tractor cannot be started up accidentally.

### LUBRICATION



Do not oil the drive chain, because the oil will work its way to the clutch!

The cable drum, main sprocket and snatchblock are fitted with self lubricating bearings.

Following points require lubrication:

1. Grease the drum clutch parts after every 500 working hours. Always use good quality lubrication grease.
2. Grease the PTO-shaft regularly and always before use as shown in figure 15.
3. Grease the drum chain lightly (not with oil) after every 50 working hours with spray type, hardening chain grease. Wipe off the excessive grease.

## CLUTCH ADJUSTMENT

1. Loosen the nuts A and B at both ends of the drum axle. Wrench opening 1 7/16" (36 mm).
2. Adjust the clutch by turning the axle C with 9/16" or 14 mm wrench. The clutch tightens clockwise, loosens counterclockwise. Turn max. 1/4 turn.
3. After adjustment retighten the nuts A and B on the ends of the drum axle.
4. Pull the control rope. The lever should move up 1.5" (4 cm) before the clutch engages. If the clutch engages earlier loosen the clutch setting.

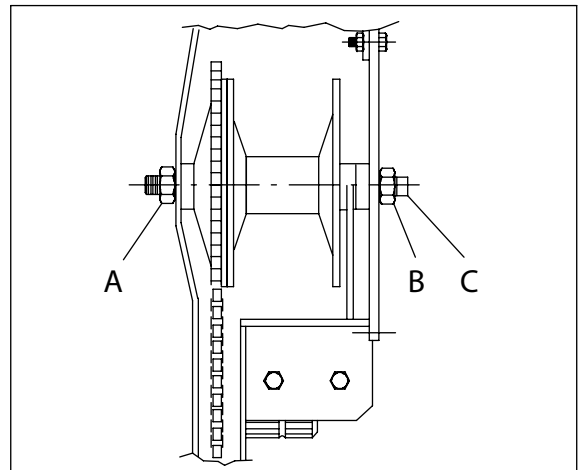


Fig. 16. Clutch adjustment

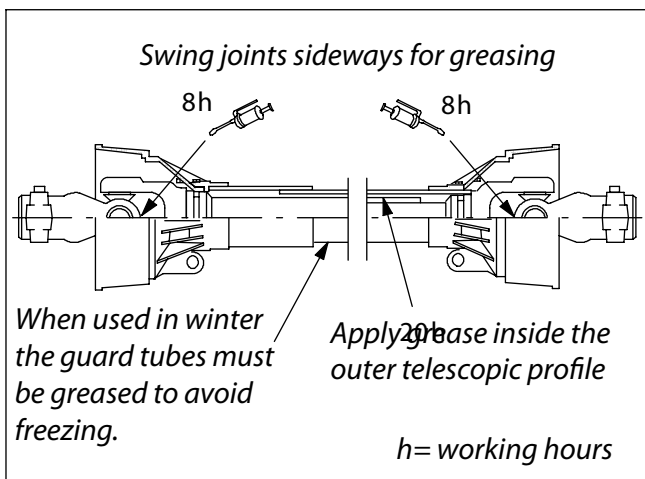


Fig. 15. P.T.O shaft lubrication

## ADJUSTING THE ROLLER CHAIN TIGHTNESS

Roller chains tightness adjustment is carried out by moving the chain tightener. See fig. 17.

1. Loosen the two bolts holding the chain tightener (11/16" or 17 mm wrench).
2. Adjust the chain tightness by moving the chain tightener towards or away from center.
3. Tighten the nuts.
4. Check that the chain tightener runs on the rollers.

**5. NOTE! Do not over tighten the chain.**

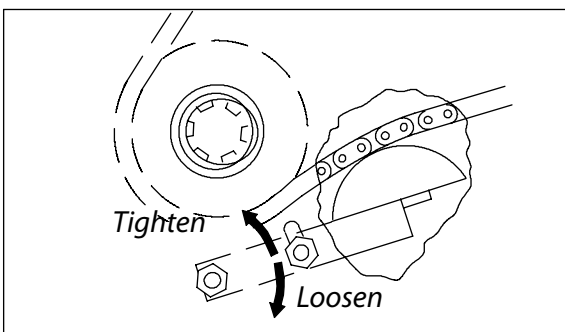


Fig. 17. Tightening the roller chain

## ADJUSTING THE DRUM BRAKE

Adjust the drum brake so that it slows down the drum slightly while pulling out the rope. This will reduce risk of tangling and backlash.

- To increase the braking effect tighten the adjustment bolt. See fig 18. To decrease the braking effect loosen the adjustment bolt.

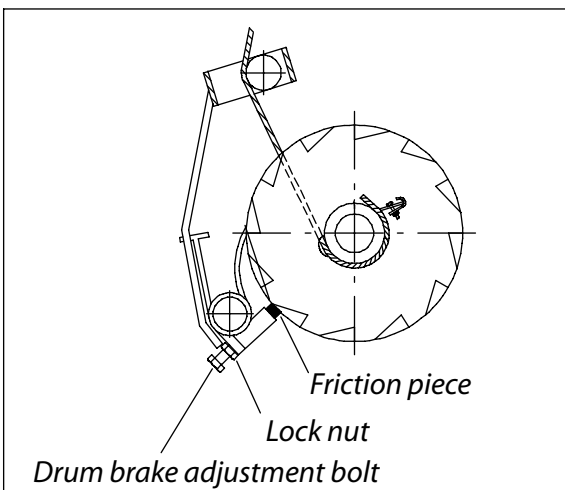


Fig. 18. Drum brake adjustment

## REMOVING THE WINCH MECHANISM

The whole winch mechanism can be removed in one piece from the frame. To remove the winch mechanism from the winch (e.g. in order to change the roller chain) follow the instructions below:

1. Park the winch on a level, stable ground so that it leans a little backwards.
2. Remove the cable.
3. Remove the fastening bolts (fig. 19 pos. B) beside the drive shaft. Socket size 24 mm (15/16").
4. Remove the two bolts (fig. 19 pos. A) at the upper edge of the cover plate. Socket size 24 mm (15/16").
5. Remove the drum axle nut (fig. 19 pos. C) and the washer. Socket size 36 mm (1 7/16")
6. Pull out the winch mechanism. Weight 148 lbs (67 kg).

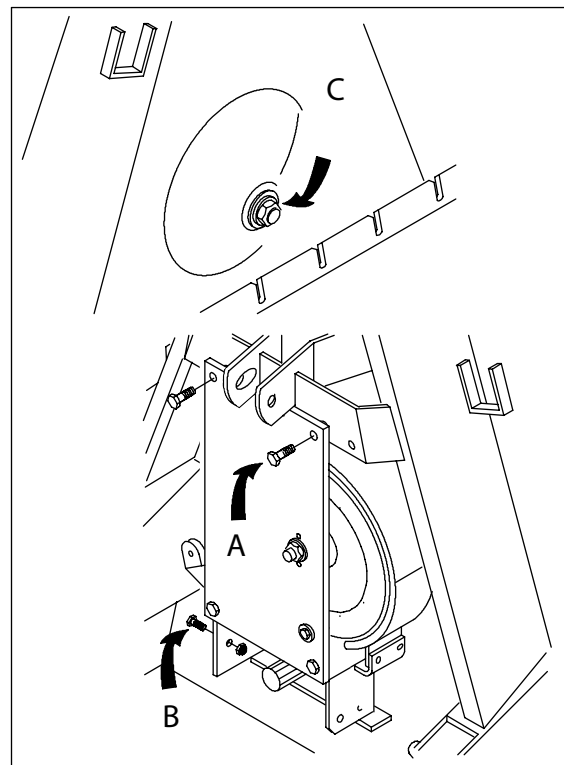


Fig. 19. Removing the winch mechanism



## ASSEMBLY OF THE MECHANISM

Make sure that the both pressure bearings are installed in a correct position, that is, the bearing with bigger internal diameter should be facing the cable drum (figure 21). Make sure that the position of the two clutch engagement halves is correct (fig. 20).

1. Place one of the clutch engagement halves on the working table so that the handle is at 8 o'clock position and the 3 slanted surfaces face up.
2. Grease the 3 slanted surfaces with vaseline and place the 3 rollers on the bottom of the slanted surfaces so that the thin ends point towards the middle. The other clutch engagement half (without handle) has 3 slanted surfaces on one side and two holes drilled on the other side (fig 20). Two studs on the back of the front plate will fit into these holes later on when the winch is assembled.
3. Place one clutch engagement half (without the handle) so that the halves bottom out when the handle is at 8 o'clock position and the two holes are at 12 o'clock and 6 o'clock (fig. 20). Be careful, there is only one correct position! Tape the halves together so that they will stay together when you mount them on the drum axle.
4. Install a protective plate. Check the clutch adjustment.

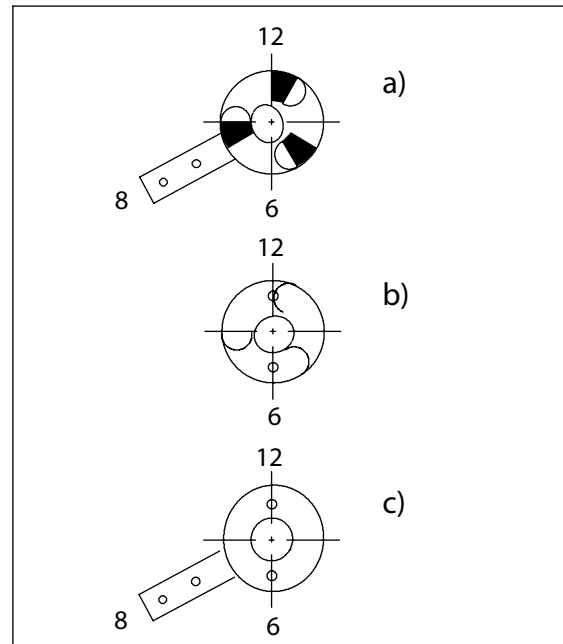


Fig. 20. Reassembling of the clutch engagement halves

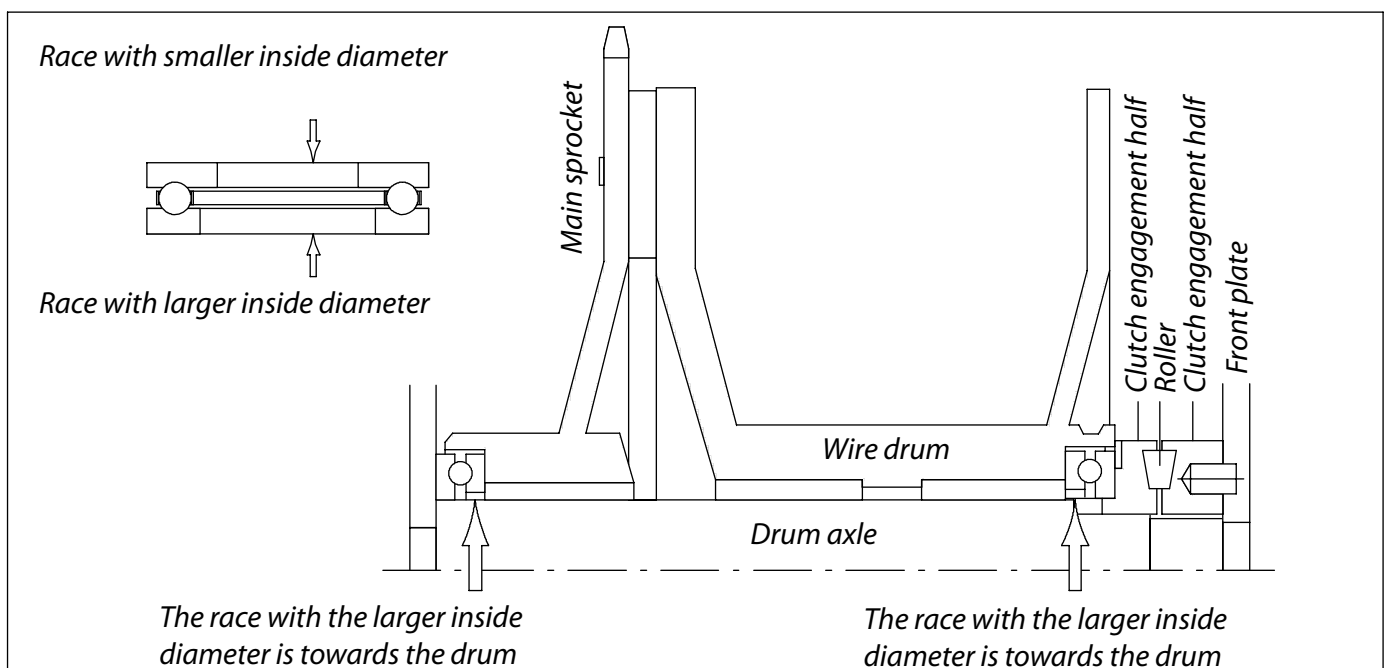


Fig. 21. Correct positioning of the thrust bearings

# JL 501

## TROUBLE SHOOTING


CONDITION	POSSIBLE CAUSE	REMEDY
Hard to pull the cable out	Drum brake is too tight.	Loosen the drum brake. See instructions from item "Adjusting the drum brake".
Cable gets tangled on the drum.	Cable too loose on the drum. The cable is pressed between loose loops.	Loosen the pin and pull the cable from the reel with the help of a tractor. Reel the cable tightly back in with the help of the load.
Cable develops kinks.	Cable brake too loose	Tighten the drum brake. Tighten cable on the drum by pulling out the cable and by winching with a heavy load.
Roller chain comes off.	Roller chain too loose, some part is broken or the aligning is incorrect.	Check the alignment of the chain. Check possible damages. Adjust the roller chain, change if necessary. See chapter "Adjusting the roller chain".
Rattling sound	Roller chain too tight, some part is broken or the aligning is incorrect.	Check the alignment of the chain. Check possible damages. Adjust the roller chain, change if necessary. See chapter "Adjusting the roller chain".
Insufficient pull on the cable	Normal wear of the clutch. Minimum thickness of the clutch plates is 7 mm.	See chapter "Clutch adjustment"
	Oil or grease in the clutch	Disassemble and clean the parts.
	Clutch too loosely adjusted	Adjustment of the clutch. See chapter "Clutch adjustment"
Tractor slides backwards when winching	Parking brakes are not on. Dozer blade does not anchor the unit firmly to the ground.	Lock on the parking brakes. Lower the winch all way to the ground.

# JL 501

---


# JL 501

## 03032182 FRAME

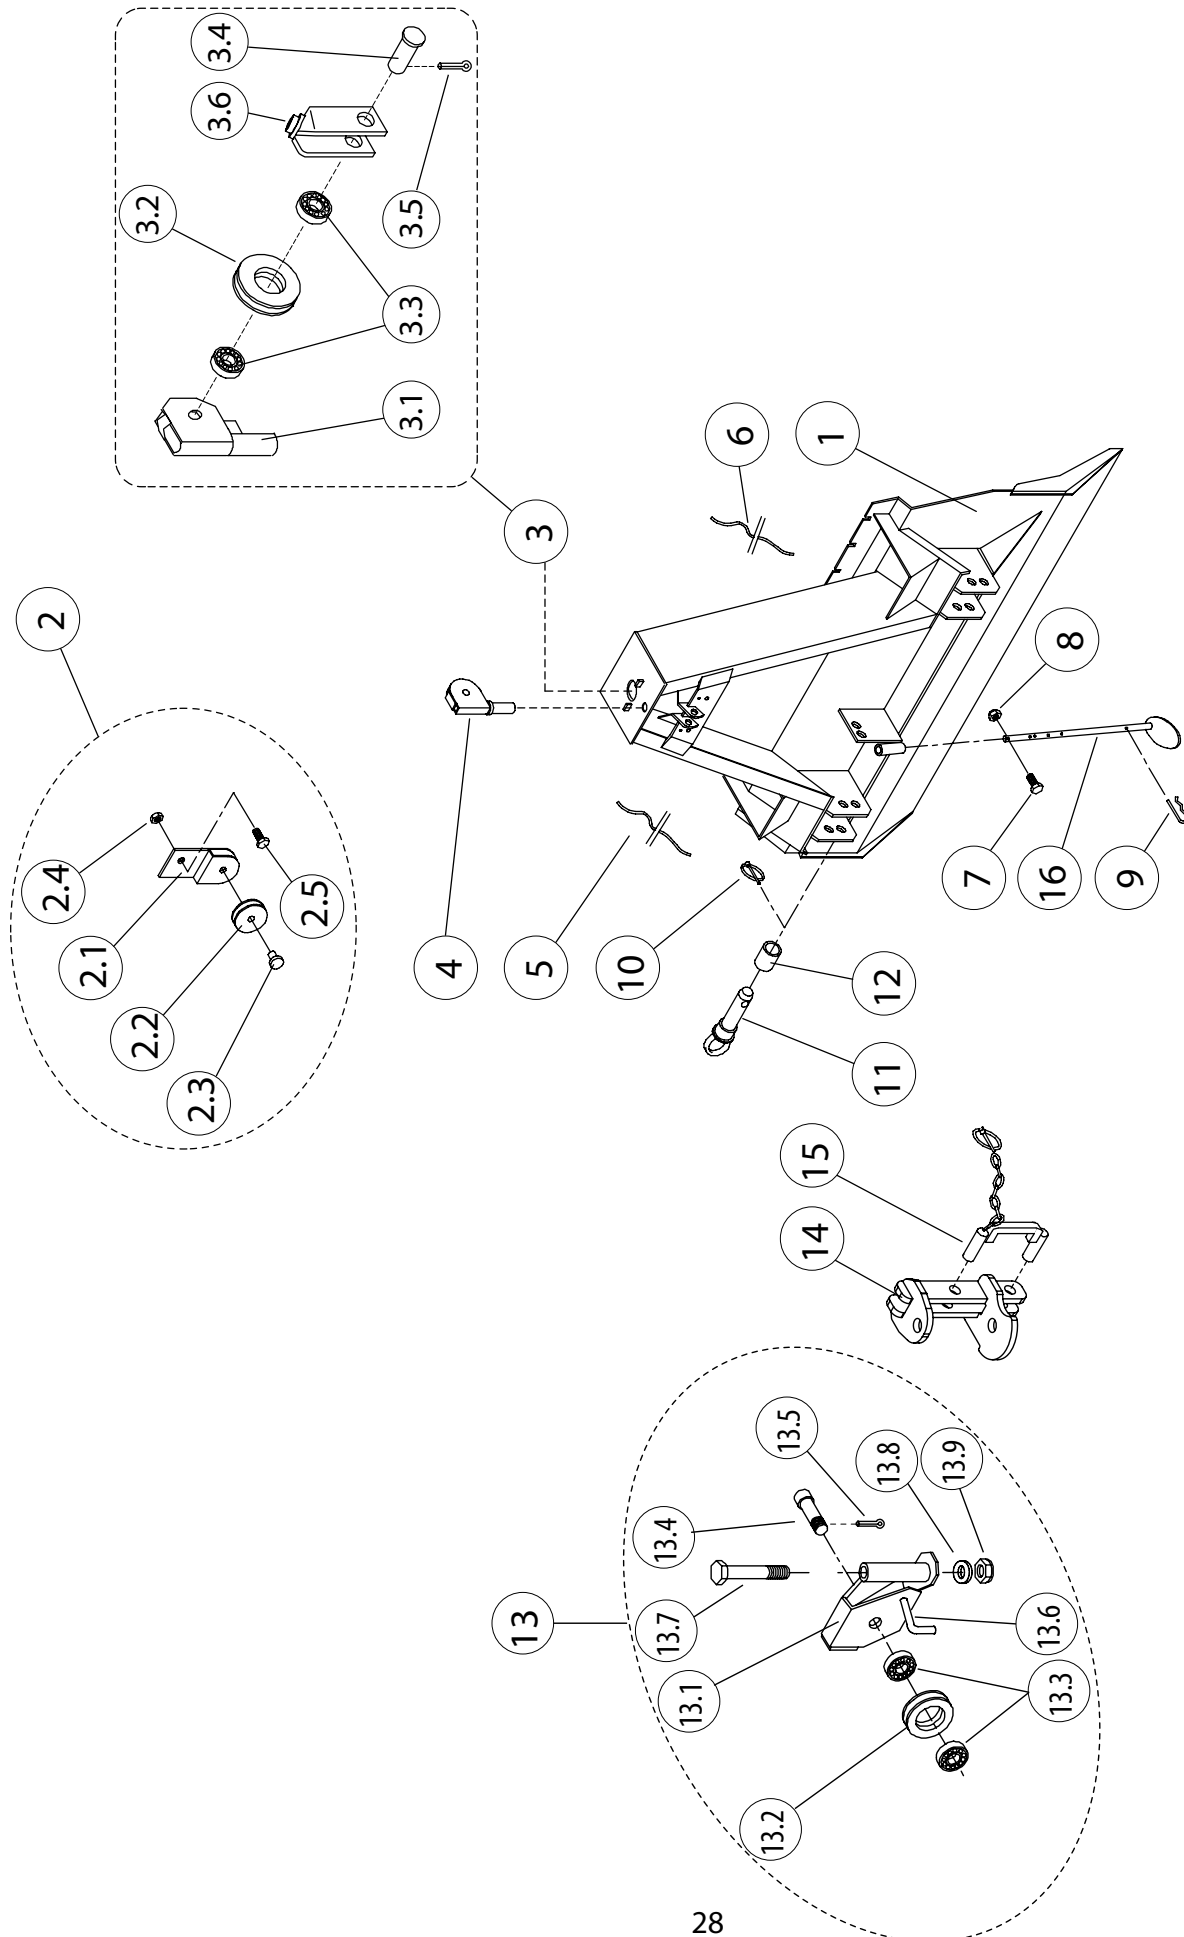


# JL 501

## 03032182 FRAME

Part	Order no	Description	Remarks	Qty
1	33032210	Frame		1
2	43020775	Snatch block	complet	1
2.1	43020783	Snatch block frame		1
2.2	43020817	Roller		1
2.3	52830122	Rivet	6X20MM ZN DIN 660	1
2.4	52117108	Lock nut	M10 DIN985 8ZN	1
2.5	52060514	Screw	M10X20 DIN933 88ZN	1
3	43184360	Upper diverting pulley	complet	1
3.1	33184260	Frame		1
3.2	43183710	Diverting pulley		1
3.3	54511159	Slotted sealed ball bearing		2
3.4	52854346	Pin		1
3.5	52813219	Split pin	6X40 DIN94 ZN	1
3.6	43184350	Finger guard		1
4	42721050	Snatch block		1
5	02721611	Clutch rope		1
6	02721629	Latch rope		1
7	52060050	Screw	M6X40 DIN933 88ZN	1
8	52117066	Lock nut	M6 DIN985 8ZN	1
9	52842143	Cotter	5X105	1
10	52842150	Ring splint	10X45	2
11	92820182	Pin		2
12	40293797	Bushing	45X76	2
13	43184400	Lower diverting pulley	complete	1
13.1	33184400	Frame		1
13.2	43183710	Diverting pulley		1
13.3	54511159	Slotted sealed ball bearing		2
13.4	52854346	Pin		1
13.5	52813219	Split pin		1
13.6	43184240	Locking pin		1
13.7	52062452	Screw	M24x200 DIN931 10.9ZN	1
13.8	52200102	Washer	M24 DIN126 58ZN	1
13.9	52117249	Lock nut	M24 DIN985 8ZN	1
14	43183810	Lower diverting pulley bracket		1
15	03403110	Locking device	complet	1
16	43020700	Parking stand		1

# JL 501

03010501 MACHINERY

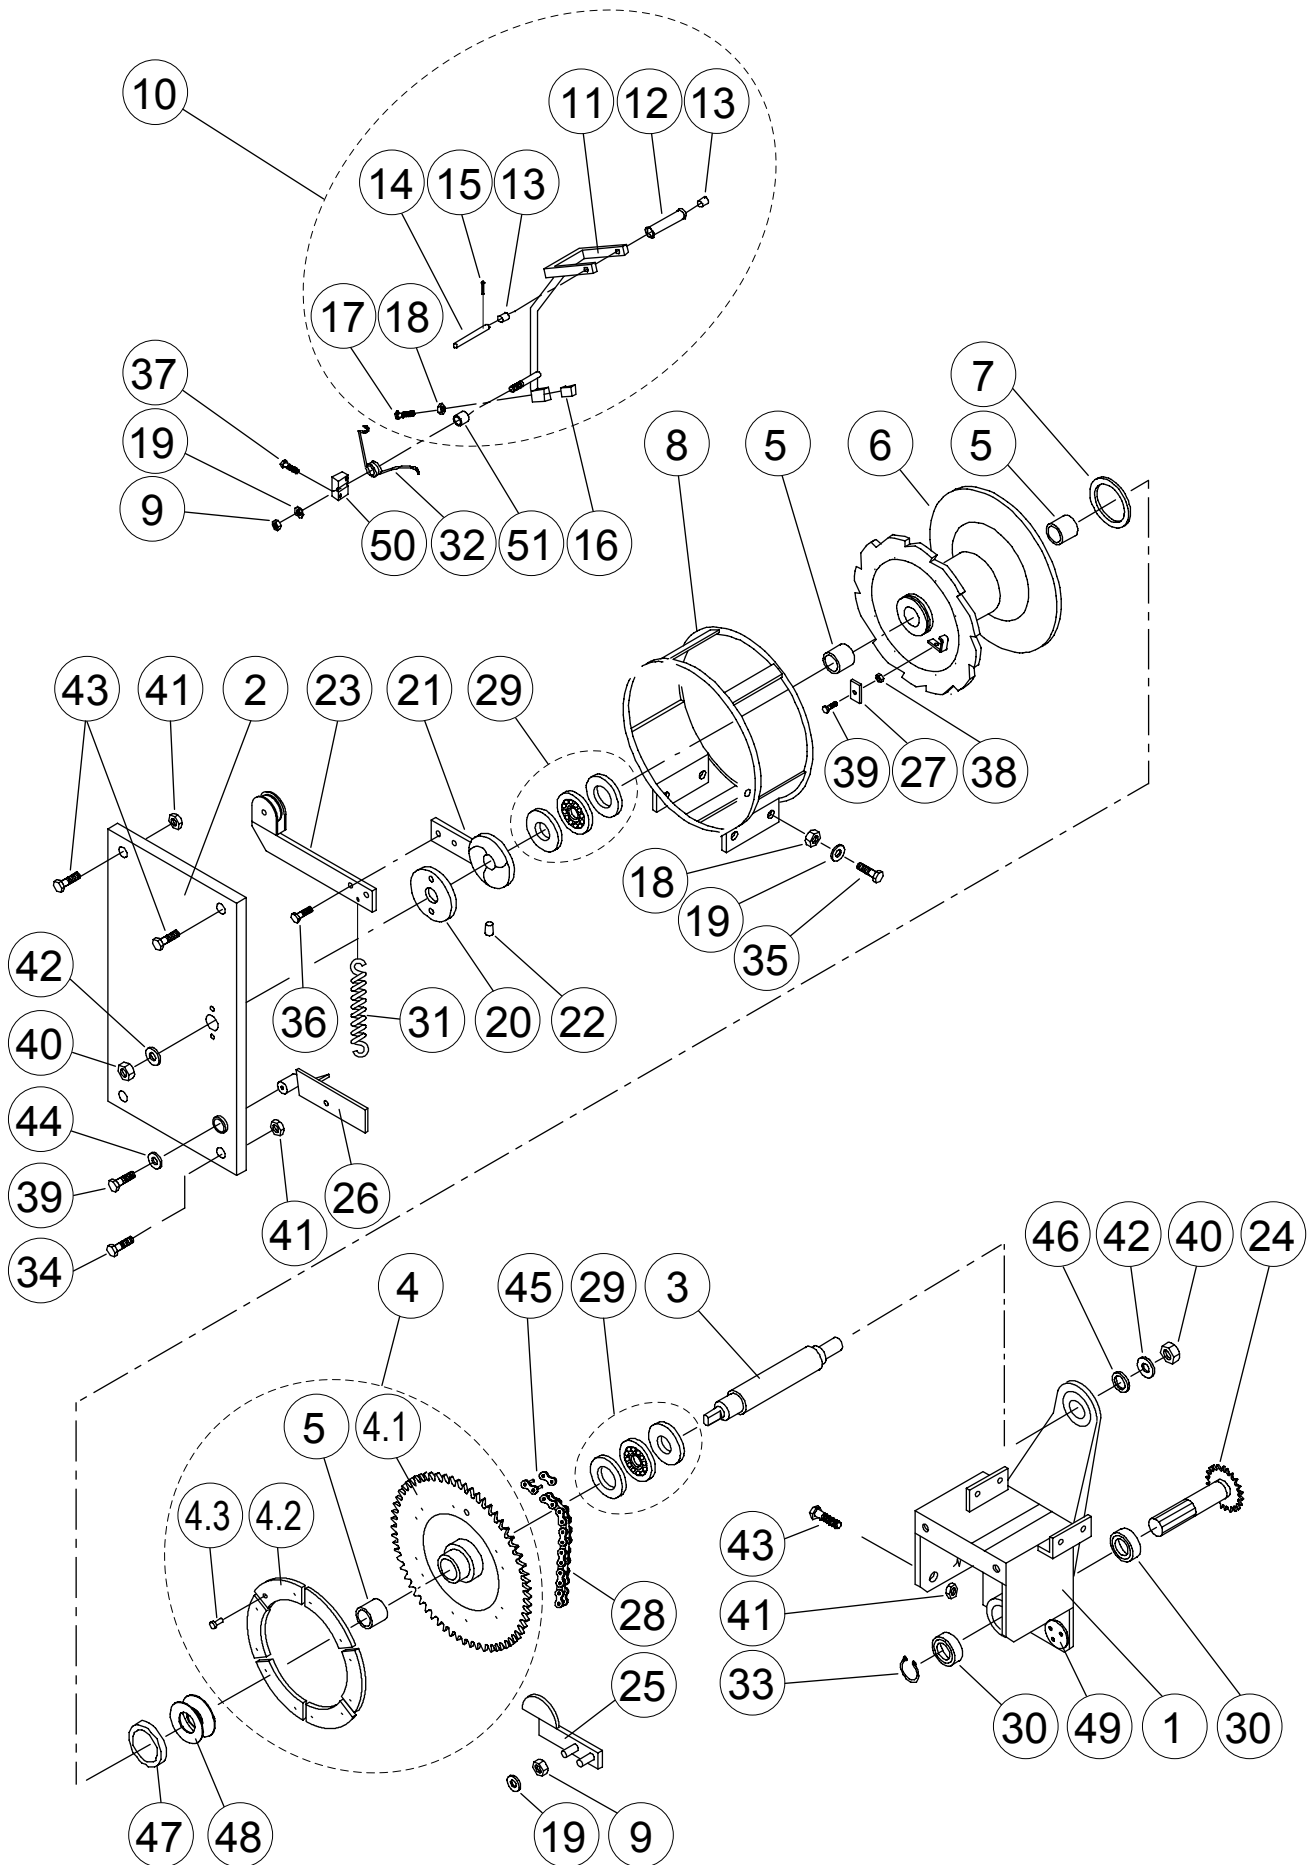


# JL 501

## 03010501 MACHINERY

Part	Order no	Description	Remarks	Qty
1	23010523	Frame		1
2	43010024	Front plate		1
3	33010059	Axle		1
4	43010446	Sprocket	complet	1
4.1	33010455	Sprocket		1
4.2	42722744	Friction plate		6
4.3	52830015	Rivet	1/4X3/4 MS DIN 7338-B	12
5	54562053	Slide bearing		3
6	33010067	Drum	complet	1
7	52390838	Felt ring		1
8	33010109	Drum cover		1
9	52117108	Lock nut	M10 DIN985 8ZN	2
10	43010164	Drum brake	complet	1
11	43011290	Drum brake		1
12	43011240	Roller		1
13	43190860	Bushing		2
14	43010222	Axle		1
15	52813094	Split pin	4X25 DIN94 ZN	1
16	42723197	Friction piece		1
17	52060258	Screw	M10X40 DIN933 88ZN	1
18	52110046	Nut	M10 DIN934 8ZN	7
19	52200045	Washer	M10 DIN126 58ZN	7
20	32722779	Clutch engagement half		1
21	42723114	Clutch engagement half		1
22	40660235	Roller		3
23	42722785	Clutch lever		1
24	43010479	Splined shaft		1
25	43000108	Chain tightener		1
26	43000645	Drum lock hatch		1
27	42723163	Key		1
28	54820584	Roller chain		1
29	54542063	Ball thrust bearing		2
30	54511274	Slotted sealed ball bearing		2

# JL 501

03010501 MACHINERY

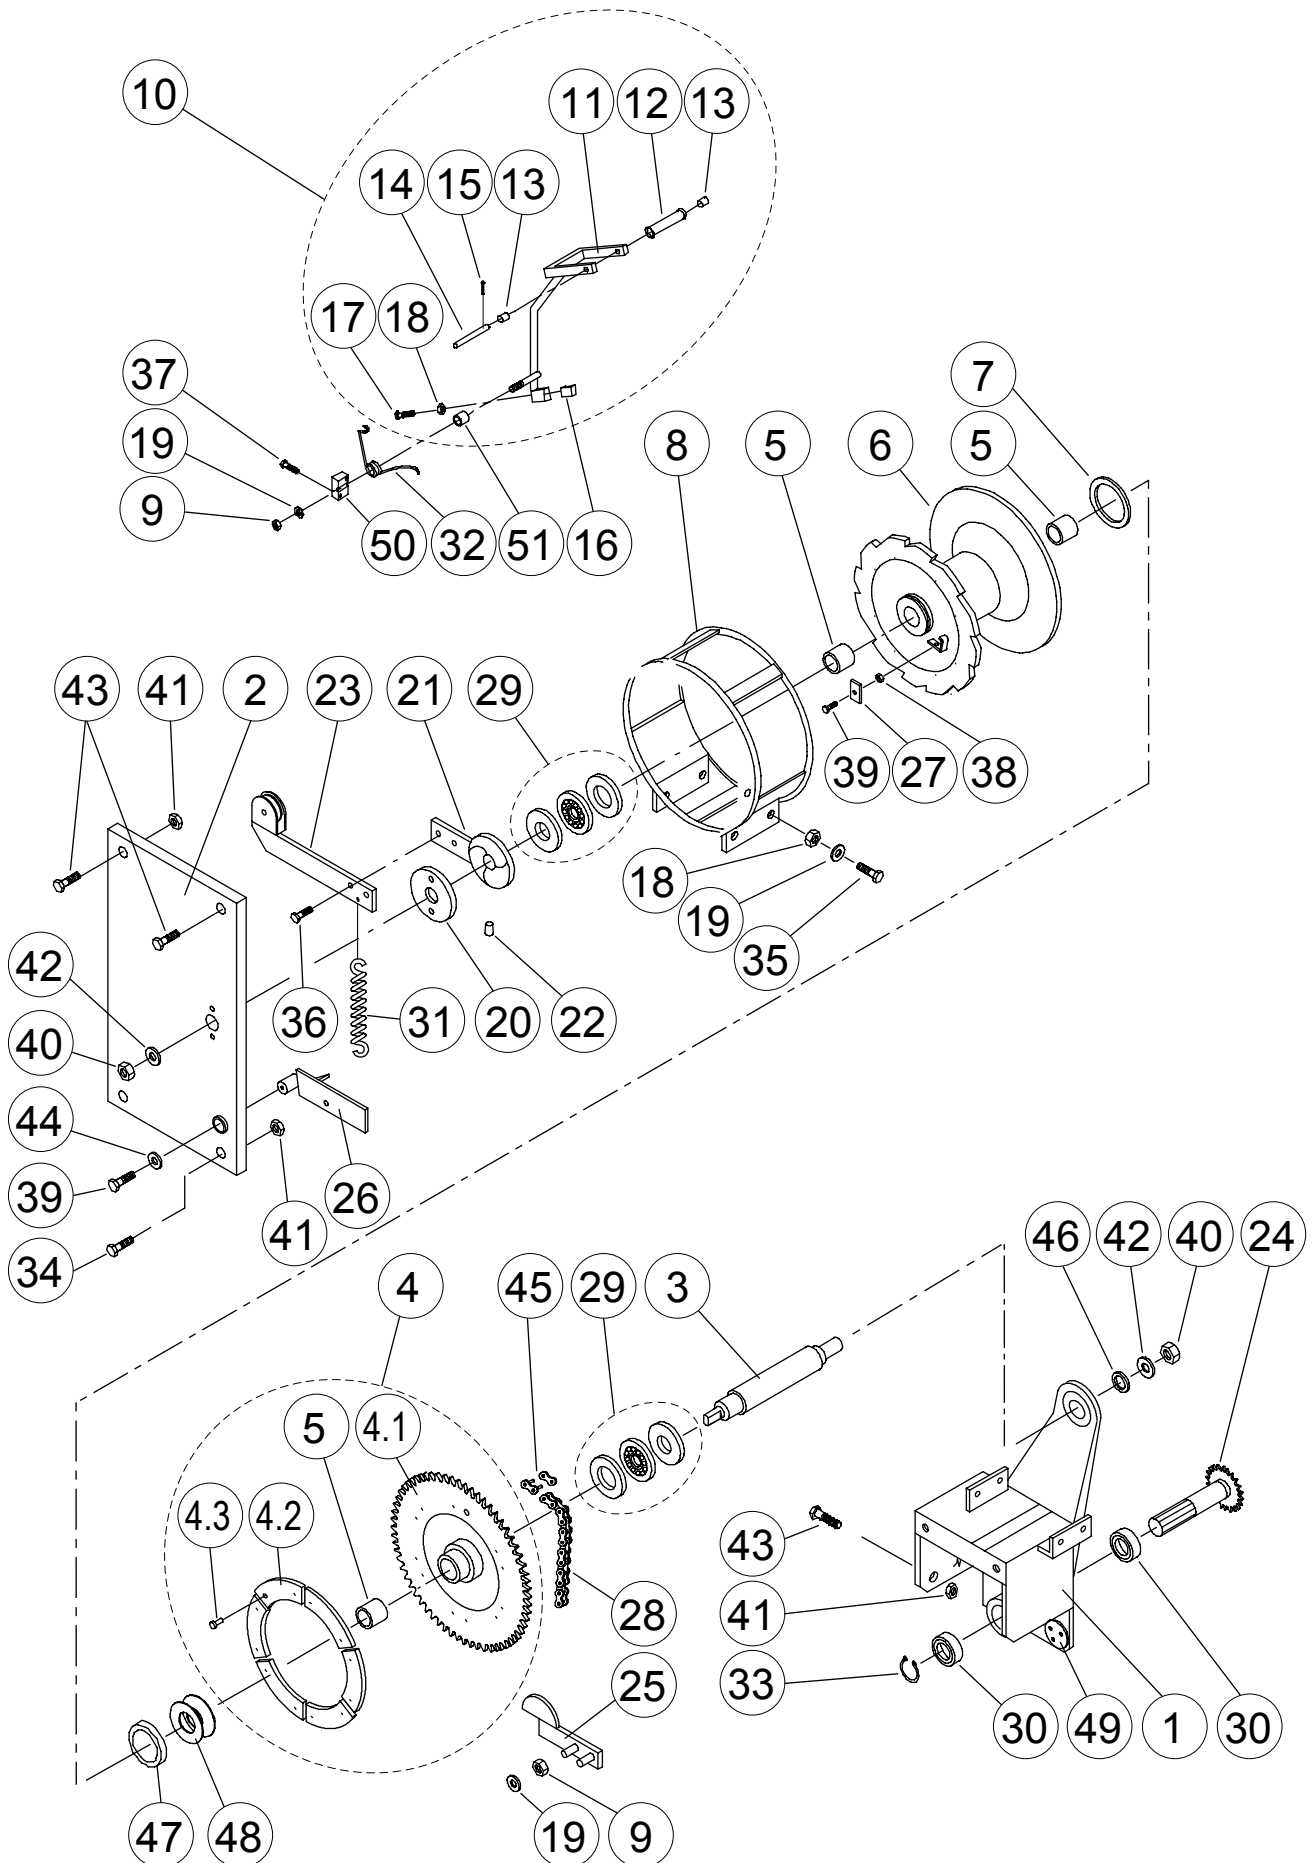




# JL 501

## 03010501 MACHINERY

Part	Order no	Description	Remarks	Qty
31	94612082	Tension spring		1
32	94624046	Torsion spring		1
33	52230067	Circlip	35X2,5 DIN471	1
34	52062122	Screw	M16X50 DIN933 88ZN	2
35	52060225	Screw	M10X25 DIN933 88ZN	4
36	52060209	Screw	M10X16 DIN933 88ZN	2
37	52060514	Screw	M10X20 DIN933 88ZN	2
38	52117082	Lock nut	M8 DIN985 8ZN	1
39	52060118	Screw	M8x16 DIN933 88ZN	1
40	52110103	Nut	M24 DIN934 8ZN	2
41	52110079	Nut	M16 DIN934 8ZN	6
42	52200102	Washer	M24 DIN126 58ZN	2
43	52062106	Screw	M16X30 DIN933 88ZN	4
44	52200235	Washer	M8 DIN9021 58ZN	1
45	54820527	Chain connecting link		1
46	43000678	Ring	D65	1
47	43010404	Bushing		1
48	54642194	Cup spring	99X70.5X1 DIN2093	2
49	43100610	Eccentric piece		1
50	43010420	Plate		1
51	43011410	Sleeve		1


# JL 501

## LOWER PROTECTIVE SCREEN

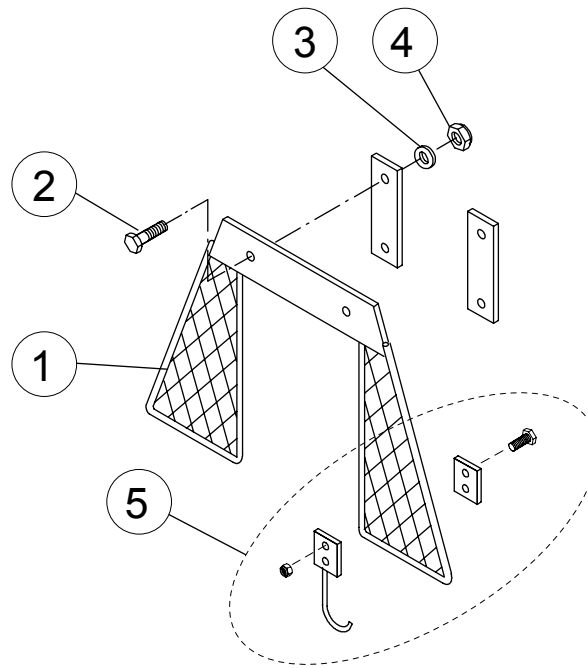

Part	Order no	Description	Remarks	Qty
1	43020502	Lower protective screen		1
2	52060225	Screw	M10X25 DIN933 88ZN	2
3	52200045	Washer	M10 DIN126 58ZN	2
4	52110046	Nut	M10 DIN934 8ZN	2
5	43130368	Hook for universal shaft	complete	1


## 43511780 COVER OF THE UNIVERSAL SHAFT

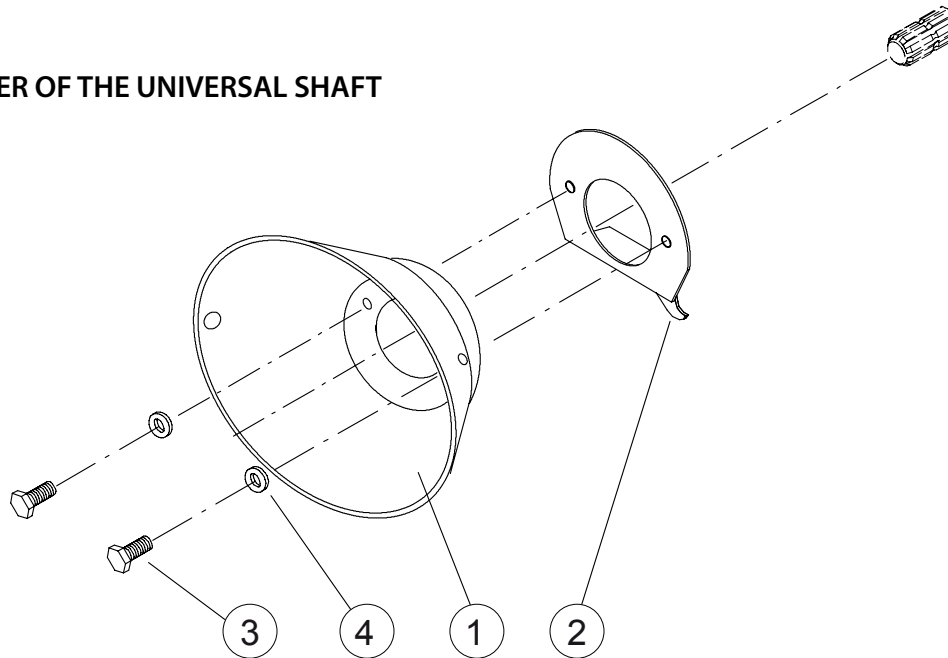

Part	Order no	Description	Remarks	Qty
1	43511780	Cover of the universal shaft		1
2	43402180	Fastener of the cover		1
3	52060100	Screw	M8X12 DIN933 88ZN	2
4	52200235	Washer	M8 DIN9021 58ZN	2

# JL 501

## 33185100 PROTECTIVE SCREEN

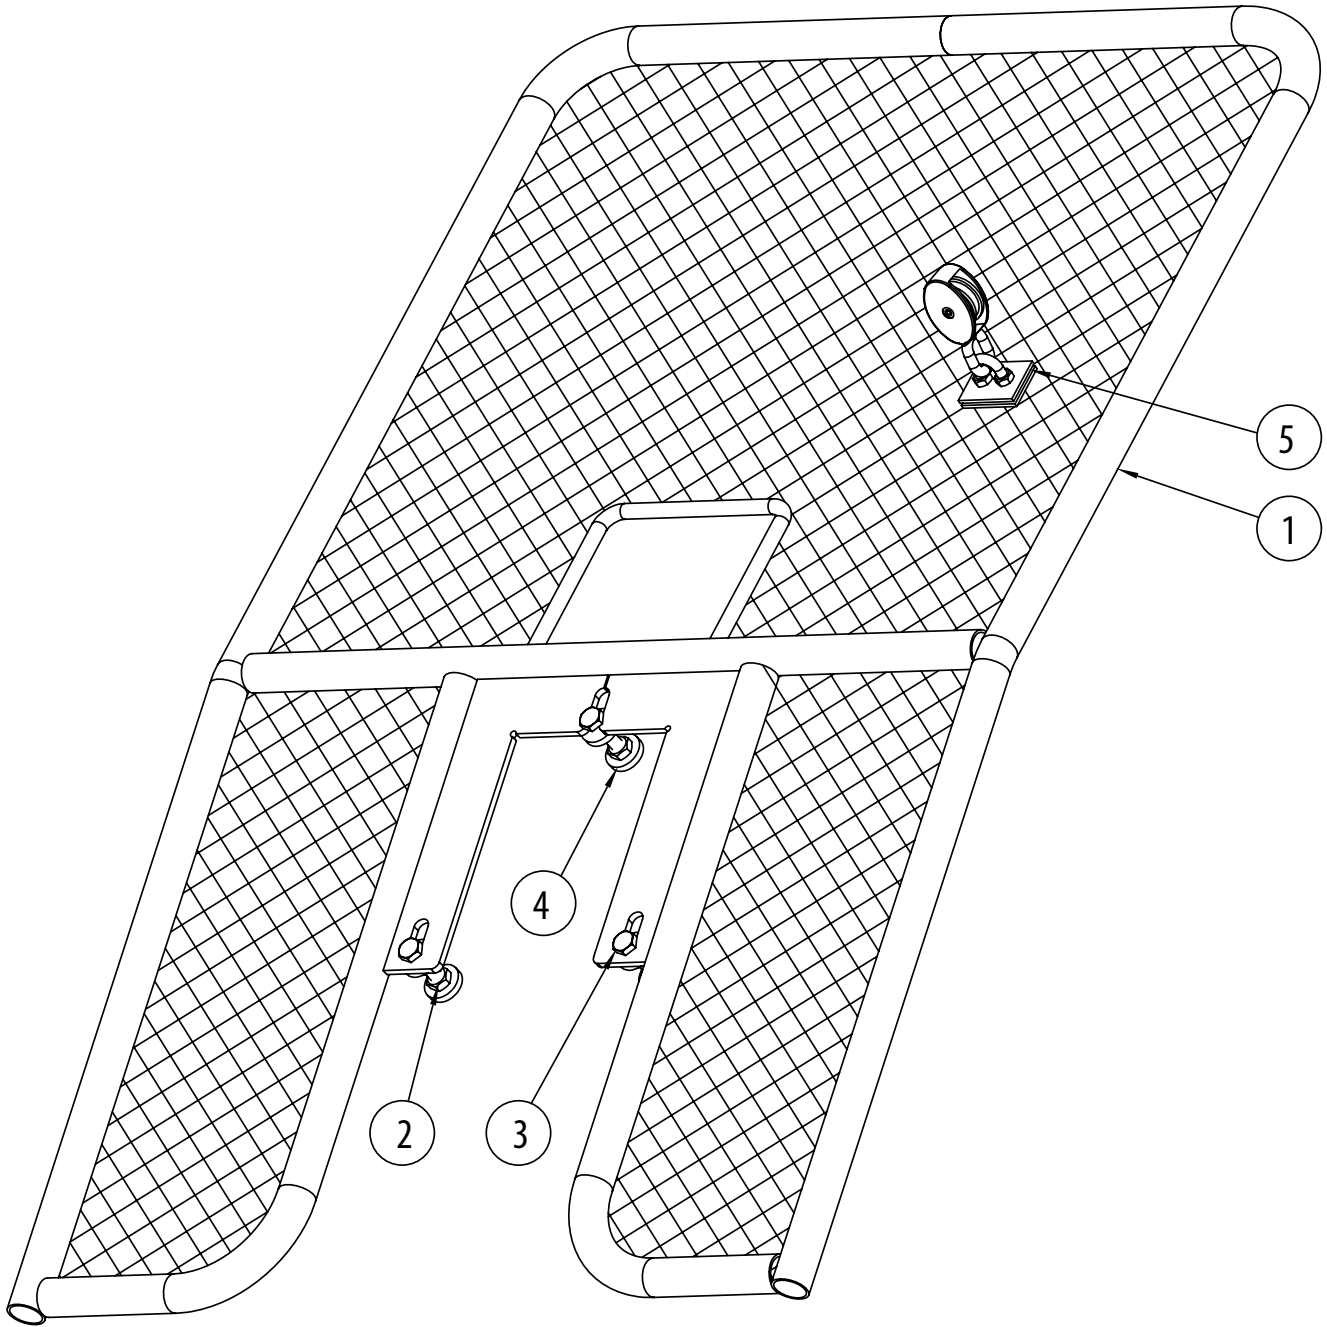

Part	Order no	Description	Remarks	Qty
1	33185110	Protective screen		1
2	52110046	Nut	M10 DIN934 8ZN	6
3	52060340	Screw	M10X50 DIN933 88ZN	3
4	52200490	Washer	M12 DIN 7349 ZN	6
5	43130137	Snatch block		1

# JL 501

## ACCESSORIES

Part	Order no	Description
JK 351	03190469	Machinery 3,5 t
JK 501	03010501	Machinery 5 t
JK 501T	03010519	Machinery 5 t, with brake
JK 601	03100006	Machinery 6 t
JK601T	03110005	Machinery 6 t, with brake
ATP 500	33032012	Lower pulley D = 105 mm
ATP 500T	33031378	Lower pulley D = 153 mm
ATP 501	03032400	Lower pulley with frame, D = 105 mm
ATP 501T	03183630	Lower pulley with frame, D = 140 mm
ATP 601T	03035200	Lower pulley with frame, D = 180 mm
ATP650T	03402000	Lower pulley with frame, D = 180 mm
W 2100	54807706	PTO-shaft, 14 kW
W 2200	54807714	PTO-shaft, 24 kW
W 2300	54821012	PTO-shaft, 34 kW
W 2400	54823060	PTO-shaft, 47 kW
Belt TP14	54713037	Belt for TP14
TP14 IH	30118120	Self releasing pulley, max. 3,5 t, without belt
LK2-TK10	54817077	Notched hook
JK 208	54827019	Skidding chain L = 2,0 m
JK 248	54827043	Skidding chain L = 2,4 m
LL 2	54813159	Choker (cable 8-12 mm)
LL 4	54813167	Choker (cable 14 mm)
VAIJ D8	54824677	Cable, D = 8 mm, F = 44 kNm
VAIJ D10	54824032	Cable, D = 10 mm, F = 63 kNm
VAIJ D12	54824040	Cable, D = 12 mm, F = 90,7 kNm
VAIJ D14	54824057	Cable, D = 14 mm, F = 123,5 kNm
SV 300T	43181577	Protective screen
SV 600T	33130303	Protective screen
PLL 500	33031196	Cable winder (JL 501) D = 90 mm
PLL 600	43120542	Cable winder (JL 601/650) D = 90 mm
ASV 400	43020502	Lower protective screen
HOF-4	03151930	Hydraulic control, 2 cylinders
HOF-4G	03151940	Hydraulic control, 2 cylinders
HOF 501	03151280	Mounting kit
HOF 601T/650T	03151290	Mounting kit
HOF ALP 55-85	03151920	Mounting kit





---

## WARRANTY

Farmi Forest Oy grants a 12-month warranty on all of its products, covering material and manufacturing faults. The warranty comes into effect on the product's delivery date.

The manufacturer is not liable for damages caused by:

 
- misuse of the product
- alterations or repairs made without the manufacturer's permission
- insufficient maintenance
- non-original parts

The warranty does not cover wearing parts.

Send faulty parts, carriage paid, to the manufacturer for inspection. Repairs will be conducted by Farmi Forest Oy or an authorized expert. The warranty is valid only if the bottom part of this page is filled in and returned to the manufacturer within 30 days of receipt of the product. By returning the warranty certificate, you confirm that you have read and understood the instruction manual that came with the product.



Farmi Forest Corporation  
Ahmolantie 6  
FIN-74510 IISALMI  
FINLAND



## PRODUCT REGISTRATION FORM

Date of delivery: \_\_\_\_/\_\_\_\_ 20\_\_\_\_

Dealer:

Dealer's address:

Dealer's tel:

Product and type:

Serial number:



Return to the manufacturer

Date of delivery: \_\_\_\_/\_\_\_\_ 20\_\_\_\_

Dealer:

Dealer's address:

Dealer's tel:

Customer:

 
Customer's address:

Customer's tel:

E-mail:

Product and type:

Serial number:





## Farmi Forest representatives: Western Europe

### Austria

Esch-Technik Maschinenhandel G.m.b.H.  
Klagenfurter Str. 129 A-9300  
ST. VEIT/GLAN  
Tel. +43 4212 2960-0  
office@esch-technik.at

### Belgium & Luxemburg

DEOM S.A.  
Rue de Monty, 177  
B-6890 LIBIN  
Tel. +32 61 656 025 / 655 248  
contact@deom.be

### Czech Republic

Agriimport s.r.o. Líté  
Líté 60  
331 52 DOLNI BELÁ  
Tel. +420 373 394 569  
www.agriimport.cz

### Denmark

ABM Stål Aps  
Egedevej 149  
4640 FAXE  
Tel. +45 56397722  
info@abmstaal.dk

### Finland

Sweden (cranes and trailers)  
Farmi Forest Oy  
Ahmolantie 6, FIN-74510  
IISALMI  
Tel. +358 17 832 41  
info@farmiforest.fi

### France

Ets. Giraud S.A.R.L.  
Z.A. de l'Étang  
F-42440 NOIRÉTABLE  
Tel. +33 4 7724 9166  
contact@giraudagriforest.com

### Germany

Meier Land- und Forstmaschinen  
Werksvertretungen & Import GmbH  
Am Schönbühl 9,  
D-92694 WEIHERHAMMER  
Tel. 0049 9605 / 92433-12  
info@meier-forsttechnik.de

### Germany

Forst und Technik Anröchte GmbH  
Wachtstrasse 9-11  
59609 ANRÖCHTE ALTENGESEKE  
Tel. +49 2927 91910  
info@forst-und-technik.de

### Greece (firewood processors)

Emin Samie  
Peleketi Iasmos  
69200 KOMOTINI  
Tel. +30 693 904 2914  
ercan.kal@gmail.com

### Hungary

Biomassza Magyarország Kft.  
13 Munkácsy str.  
H-6412 BALOTASZÁLLÁS  
Tel. +36 30 475 9145  
info@farmiforest.hu

### Iceland

Vidfang  
Frostafold 38  
IS-112 REYKJAVIK  
Tel. +354 557 6513  
vidfang@simnet.is

### Italy

De Angeli Ing. Andrea Soc. a r l  
Viale Trento 2/4  
39100 BOZEN  
Tel. +390 471 971 545  
info@deangeli.bz.it

### Netherlands

W. van den Brink  
Schilschoterweg 4  
6732-GG HARKAMP  
Tel. +31 318 456 228  
info@lmbbrink.nl

### Norway

Sisu Produkter AS  
Dyrskueveien 42  
2040 KLØFTA  
Tel. +47 63 943 900  
kontor@sisu.no

### Poland

Kompania Lesna Sp.J.  
Nowy Dwór Parcela 21  
96-115 NOWY KAWECZYN  
Tel. +48 468 336 801  
magazyn@kompanialesna.pl

### Portugal

Agricortes Lda.  
Av. do Lis - Cortes  
P 2414-025 LEIRIA  
Tel. +351 244 819 112  
agricortes@agricortes.com

**Romania**

Valtec International Group  
BUCHAREST  
Tel. +40 744 256 463  
contact@valtecgroupp.ro

**Spain**

MOTOGARDEN, S.A.  
C/ Eduardo Pondal, s/n  
Polígono de Sigüeiro - Parcela 58,  
15688 Sigüeiro - Oroso La Coruña  
Tel. +34 981 69 63 08  
motogarden@motogarden.com

**Switzerland**

Ad. Bachmann AG  
Maschinen und Fahrzeuge  
Wilerstrasse 16 CH-9554  
TÄGERSCHEN TG  
Tel. +41 (0) 71 918 8020  
info@adbachmannag.ch

**United Kingdom**

Farmi Forest Corporation UK  
Unit 5 Wheler Road  
Seven Stars Industrial Estate  
Coventry CV3 4LJ, UK  
Tel. +44 (0)24 7746 1976  
greg.worley@farmiforest.fi

**Slovakia**

Agrifarmi s.r.o.  
Za Jordánom 6  
036 08 MARTIN 8  
Tel. +421 43 4282 501  
agrifarmi@agrifarmi.sk

**Sweden (chippers and winches)**

Nordfarm Maskin AB  
Surgatan S-602 28  
NORRKÖPING SWEDEN  
Tel. +46 11 197 040  
info@nordfarm.se

**Turkey**

Rekarma Makine Sanayi ve Ticaret A.Ş  
Kimya Sanayicileri O.S.B.  
Aromatic Cad. No: 37 34956  
Aydinli TUZLA ISTANBUL  
Tel. +90 216 593 09 42  
mustafa.kemal@rekarma.com

**Farmi Forest representatives: Eastern Europe****Belarus**

TIGER, Joint Stock Company  
1st Twerdy lane, 7 - 17  
MINSK 220037  
Tel. + 375 17 294 68 24  
tigers@tut.by

**Estonia**

Oü Melit AP  
Ümera 60-8 13816  
TALLINN  
Tel. +372 6384 336  
info@melit.ee

**Latvia**

Sia Heta  
Izstazu Komplekss Ramava,  
RIGA, LV-1076  
Tel. +371 2911 2961  
heta@apollo.lv

**Lithuania**

UAB "MMC Forest"  
Plungés g. 43  
90313 RIETAVAS  
P. +370 682 422 66  
vaidas.mmc@gmail.com

**Russia**

Bioresurs technolog ltd.  
Konstitucii pl, 7  
ST. PETERSBURG  
Tel. +7812 339 21 70  
sales@bioresurs.com

**Russia**

Rusobalt Trade Ltd  
Ul. Olginskaja Naberegnaja, d. 5A 180007  
PSKOV  
Tel. +7 (8112) 72 77 04  
info@rusobalt.ru

**Ukraine**

ooo D Light  
Novgorodskaya Str. 11-A  
61166 KHARKOV  
Tel. +38 057 720-11-56  
info@velmash.com.ua

## Farmi Forest representatives: North and South America

### Argentina

Inderfor S.A.  
Pasco 1732 - 10° "A" 2000 Rosario  
SANTA FE  
P. +54 (0)341 679 25 66  
info@inderfor.com

### Canada, New Brunswick

Maritime Farm Supply Ltd.  
38 Old Berry Mills Road  
E1G 3W4 BERRY MILLS  
NEW BRUNSWICK  
Tel. +15 068 573 134  
www.maritimefarmssupply.com

### Dominican Republic

Bosquesa S.A.  
Carratera Stgo - Licey, Km 5½, Stgo.,R.D.  
SANTIAGO DE LOS CARABELLOS  
Tel. +1 809 736 0333, 0208  
contacto@bosquesa.com.do

### Mexico

Crupo Acción Forestal  
Abraham Zepeda, Priv. El Eden # 5  
621 30 Cuernavaca Col. Buena Vista  
C.P. MEXICO  
Tel. +527 773 117 248  
contacto@gafmex.com

### USA

Northeast Implement  
460 Halsey Valley Rd  
Spencer, N.Y. 14883  
Tel. +1 607 589 6160  
www.northeastimplement.com

### Canada, Québec, Ontario

La Coop fédérée  
9001, Boul. de l'Acadie  
MONTRÉAL, QUÉBEC H4N 3H7  
Tel. 819-379-8555  
information@lacoop.coop

### Colombia

Eurosierras  
Calle 25 A 43B - 161  
Barrio Colombia  
MEDELLIN  
Tel. (57)(4) 384 0000  
info@eurosierras.com

### Guatemala

SWE-CA S.A.  
30 Calle 18-18, Zona 12 010 12 GUATE-  
MALA CITY  
COLONIA SANTA ROSA II  
Tel. +502 4422 271  
sweca.ventas@gmail.com

### Uruguay

Inderfor S.A.  
Pasco 1732 - 10° "A" 2000 Rosario  
Santa Fe, ARGENTINA  
Tel. +54 (0)341 679 25 66  
info@inderfor.com

## Farmi Forest representatives: Other countries

### Australia

Wood Chippers Australia  
414 Davis Road  
2480 Jiggi Via Lismore  
NEW SOUTH WALES  
Tel. +61 2 6688 8263  
shaun@woodchippersaustralia.com.au

### Indonesia & Singapore

PT DIRJO MULIA INTERNASIONAL  
Wisma GKBI, Suite 3901, Jl. Jend. Sudir-  
man, No. 28  
10210 Jakarta INDONESIA  
Tel. +62-21-5799-8043  
sales@dirjomuliagroup.com

### Japan

Forest Limited Company  
445-16, HIRAOKA,  
Mamurogawa-Machi  
Mogami, YAMAGATA  
Tel. (0233) 62-3823  
www.forest-machine.jp

### Ile de la Reunion

Foucque SA  
69, db du Chaudron  
97490 STE-CLOTILDE  
Tel. +2 62 48 87 87  
Fax: +2 62 262 48 24 61

### Mauritius

Robert de Maire Limited  
Sir William Newton Street  
PORT LOUIS  
Tel. +230 2126 488  
Fax: +230 2126 490

### Tahiti-French Polynesia

Enterprice Sentenac Philippe  
BP 120353  
98712 PAPARA  
Tel. +689 777 123  
sentenactahiti@mail.pf



Farmi Forest Corporation  
Ahmolantie 6  
FIN-74510 Iisalmi, Finland  
Tel. +358 (0)17 83 24 400  
[info@farmiforest.fi](mailto:info@farmiforest.fi)  
[www.farmiforest.fi](http://www.farmiforest.fi)